

COASTER[®]
FINE FURNITURE

703147

END TABLE

**ASSEMBLY INSTRUCTION
COASTER FINE FURNITURE**



www.coastercompany.com

ASSEMBLY INSTRUCTION

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




Warning !!

1. Don't attempt to repair or modify parts that are broken or defective .Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.


PARTS IDENTIFICATION

(A) TOP BANEL

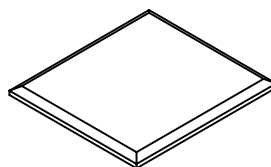

1 PC

(B) BASE

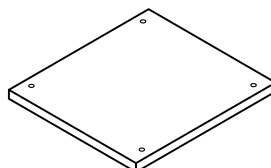

1 PC

(C) REAR-RIGHT ARC LEG/ FRONT-LEFT ARC LEG




2 PCS

(D) FRONT-RIGHT ARC LEG/ REAR-LEFT ARC LEG








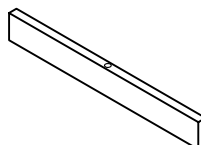






2 PCS

  
(E) CROSS BAR



2 PCS

 
Z	HARDWARE PACKAGE			
NO	DESCRIPTION		FIGURE	Q'TY
1	FLAT-HEAD SCREW	M6x40mm		4pcs
2	WOOD SCREW	Ø7x58mm		2pcs
3	PLASTIC PAD WITH SCREW	Ø55x25mm		4pcs
4	CAMLOCK SCREW	L29		4pcs
5	CAMLOCK	Ø15		4pcs
6	DOWEL	Ø8x25mm		6pcs
7	SELF-TAPPING SCREW	Ø4x50mm		4pcs
8	HAMMER BOLT	Ø6x55mm		4pcs
9	HAMMER NUT	Ø10x15mm		4pcs
10	ALLEN WRENCH	M4		1pc
11	STICKER	Ø18		6pcs
12	GLUE	10g		1pc

Align and attach rear-right arc leg/front-left arc leg (C) and front-right arc leg/rear-left arc leg (D), by using wood screw, tighten with a screw driver (NOT INCLUDED). Repeat the process.

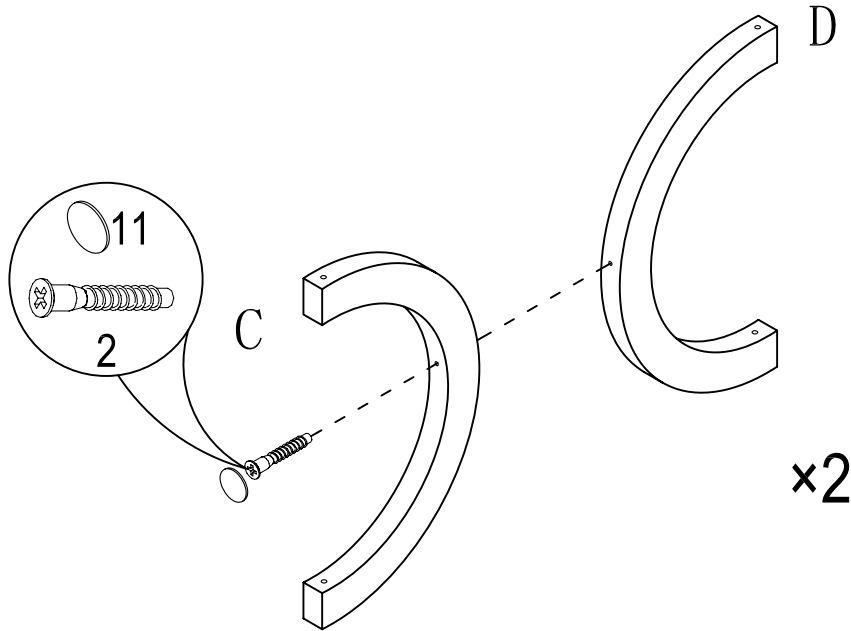


STEP 1

STEP 2

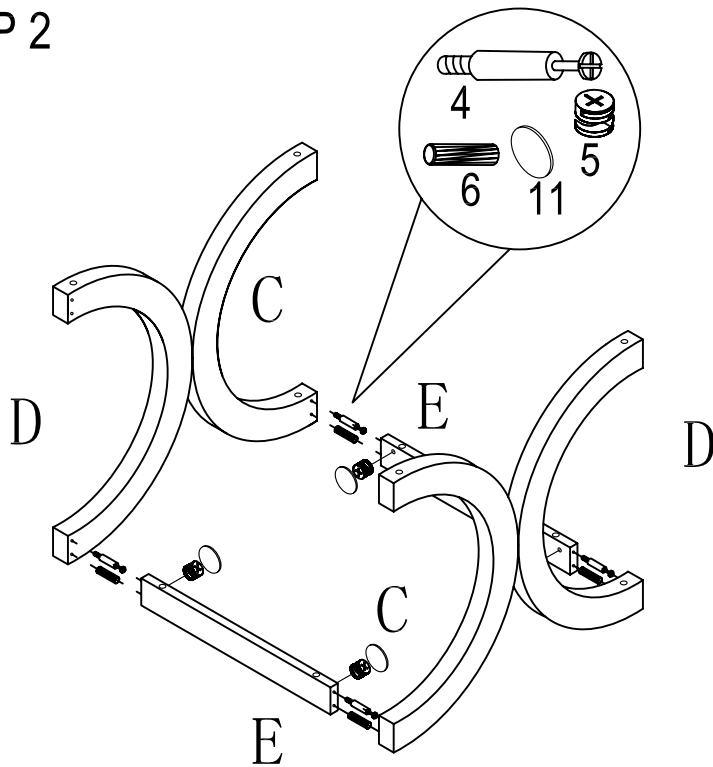

Attach the cam lock screw (4) to the rear-right arc leg/front-left arc leg (C) and front-right arc leg/rear-left leg (D), then add glue to the dowel, before attach them to the rear-right arc leg/front-left arc leg (C) and front-right arc leg/rear-left leg (D). Align and attach cross bar (E) to the rear-right arc leg/front-left arc leg (C) and the front-right arc leg/rear-left leg (D), using the cam locks, tighten with a screw driver (NOT INCLUDED). Place the sticker on the cam locks.

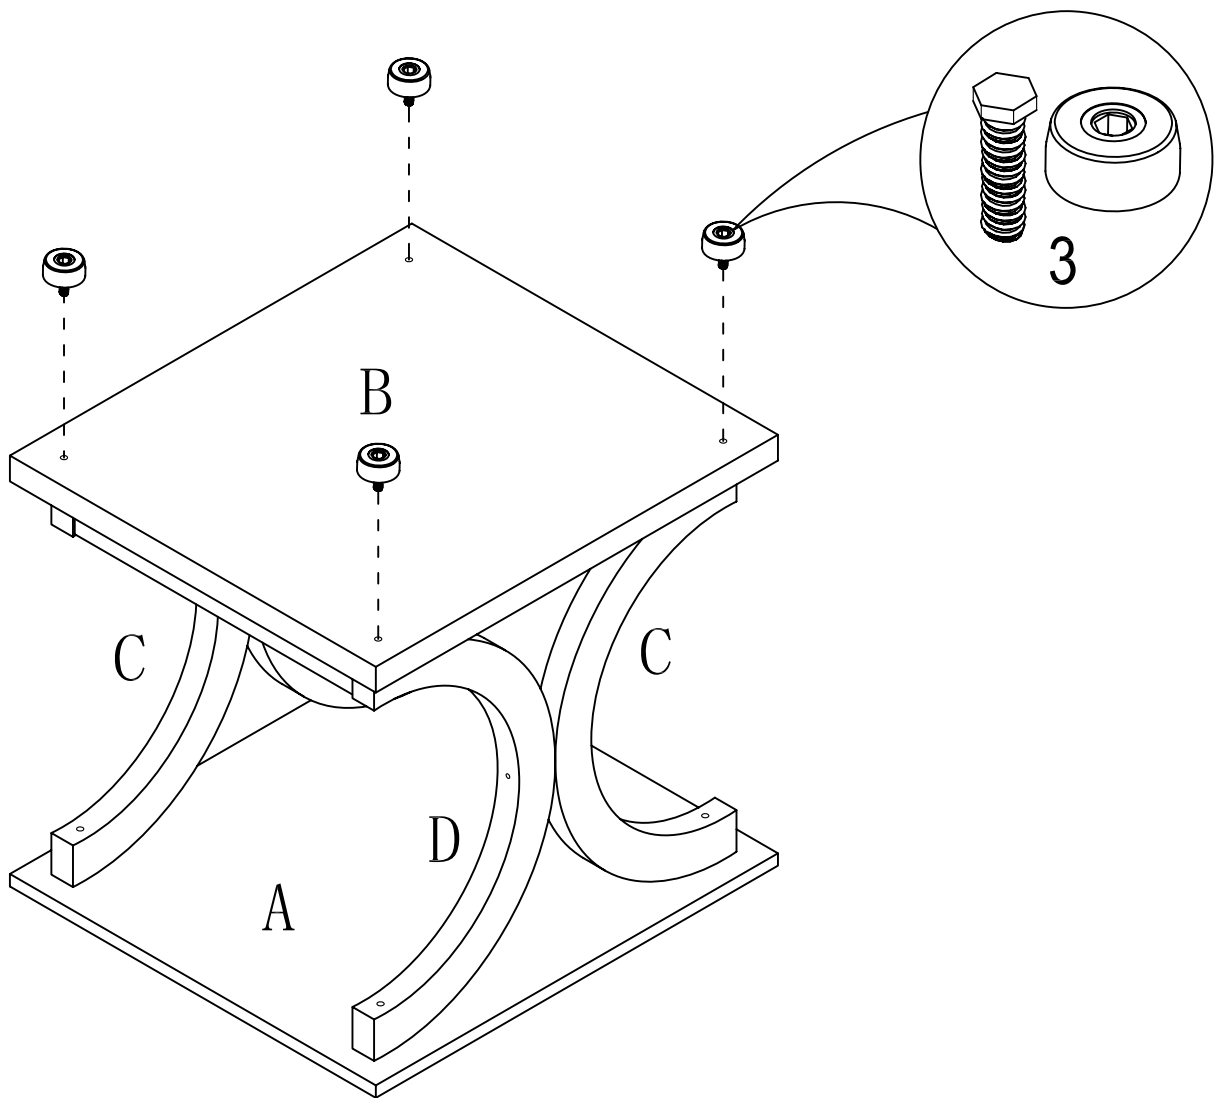

STEP 5

Then attach the plastic pad with screw (3) to the base (B).