

KITCHEN CART

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



www.coastercompany.com

PAGE 1 OF 10

REVISION 0: 06/11/2012

REVISION 1: 01/18/2017

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




Warning!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.





ASSEMBLY TIME | 75 MINUTES

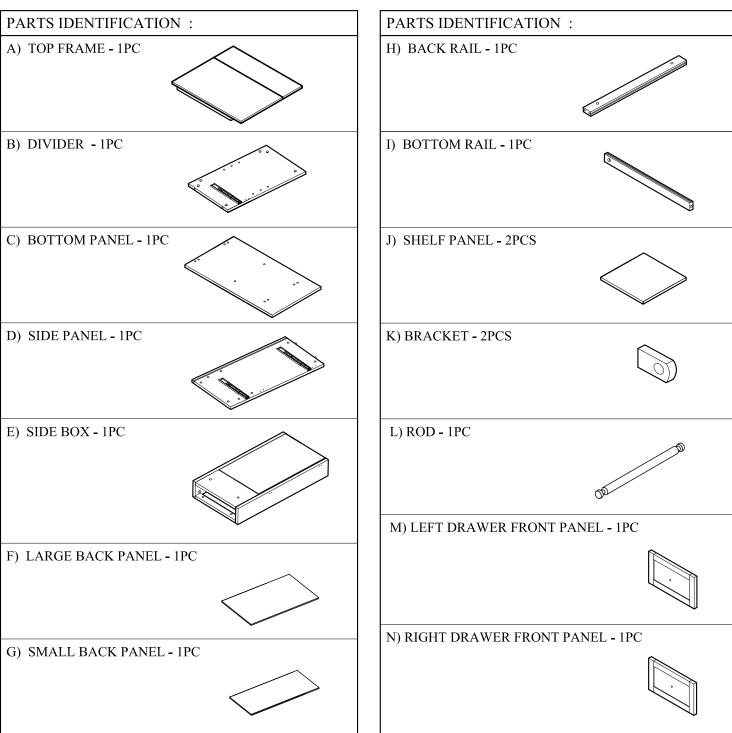


ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

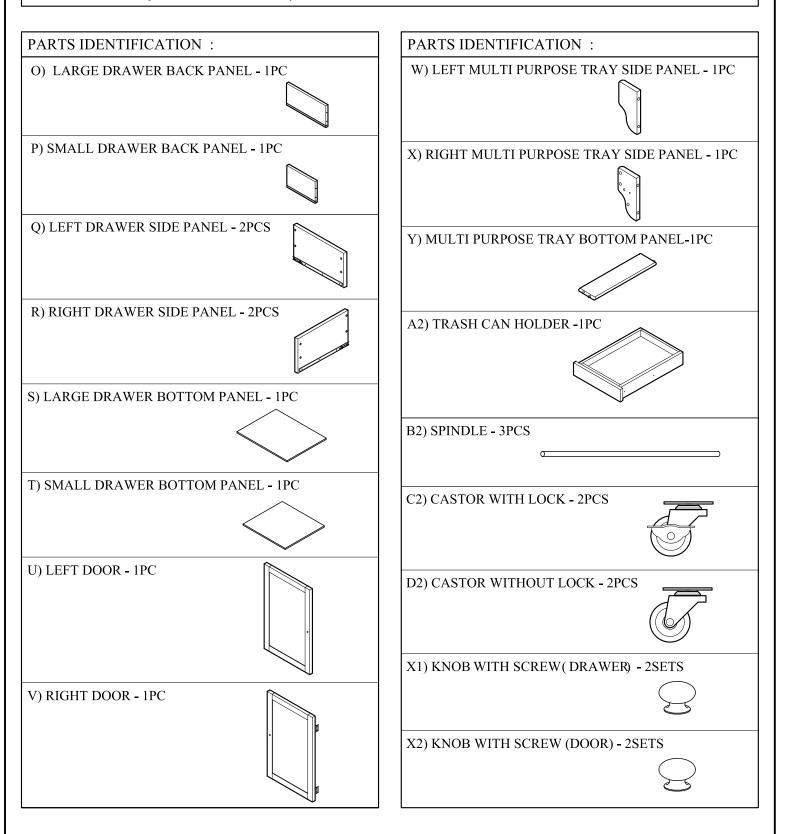




ASSEMBLY TIPS:


- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

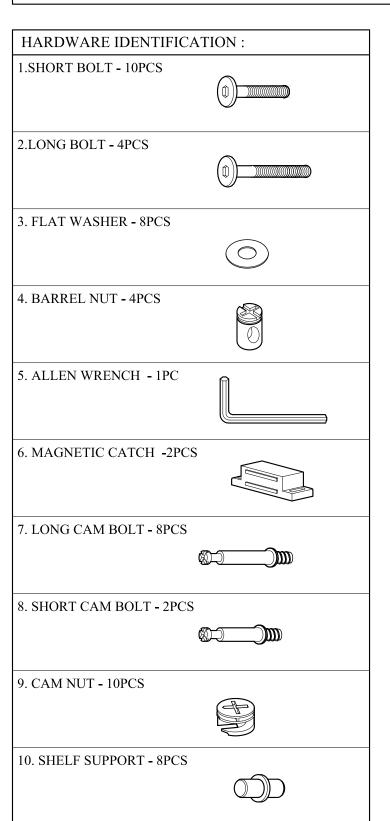

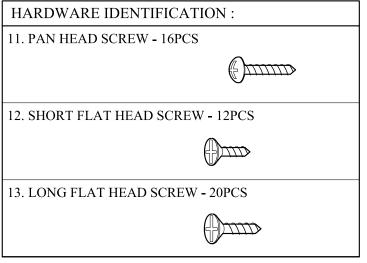

NOTE: PHILLIPS HEAD SCREW DRIVER AND RUBBER
MALLET ARE REQUIRED IN THE ASSEMBLY
PROCESS; HOWEVER MANUFACTURER DOES
NOT PROVIDE THESE ITEMS.

