

**COASTER**  
Fine Furniture®

**601741P**

**POWER MOTION SOFA  
WITH DROP DOWN TABLE**

**ASSEMBLY INSTRUCTION**

**COASTER FINE FURNITURE**



**WWW.COASTERCOMPANY.COM**

# Assembly Instruction





## ASSEMBLY TIPS:

1. Remove hardware from box and sort by size
2. Please check to see that all hardware and parts are present prior to start of assembly
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

### Warning!


1. Do not attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

## PARTS IDENTIFICATION

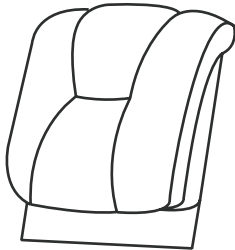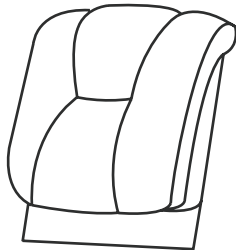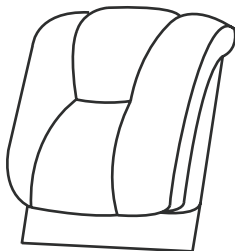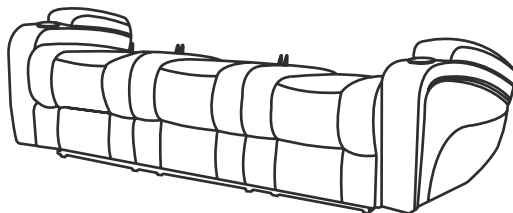**(A)****LEFT BACK****1 PC****(B)****MIDDLE BACK****1 PC****(C)****RIGHT BACK****1 PC****(D)****BASE****1 PC**

It takes one person approximately thirty minutes to complete assembly.



### STEP 1

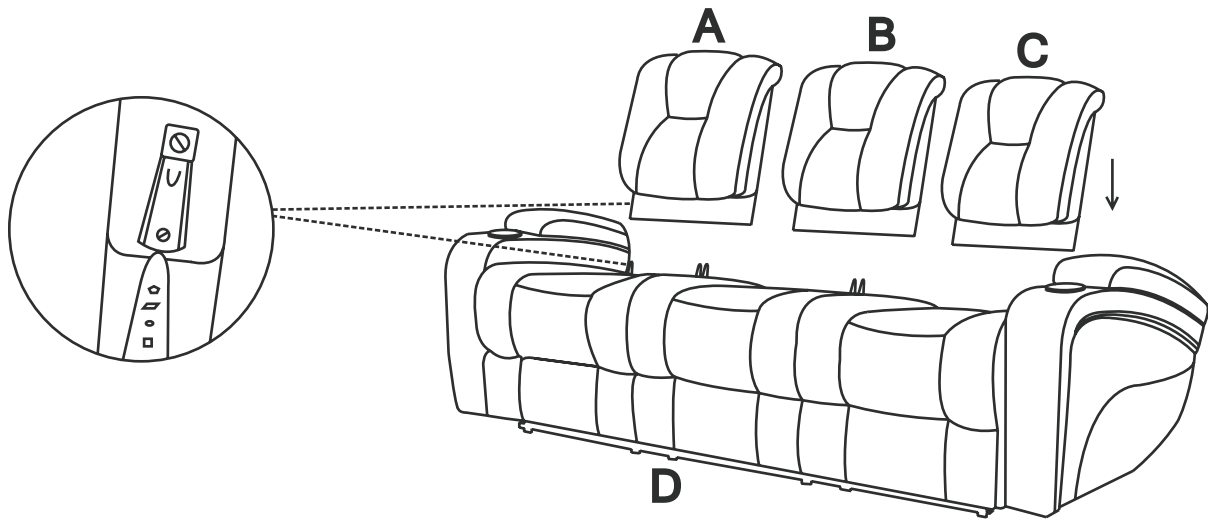


### STEP 3

TO OPERATE CENTER CONSOLE READING LIGHT, FIRST SELECT IF YOU PREFER TO USE THE LEFT OR RIGHT CUP HOLDER AS THE SWITCH.


LEFT SWITCH OR RIGHT SWITCH

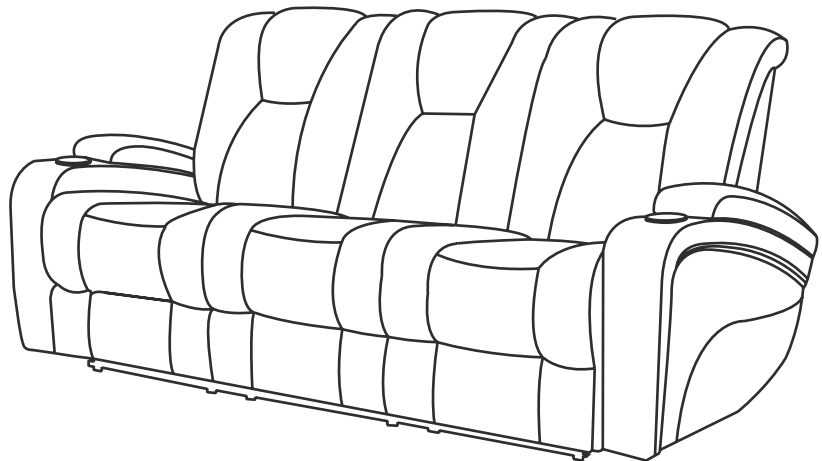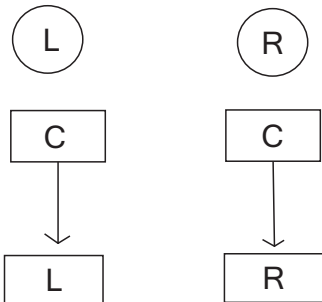

### STEP 3

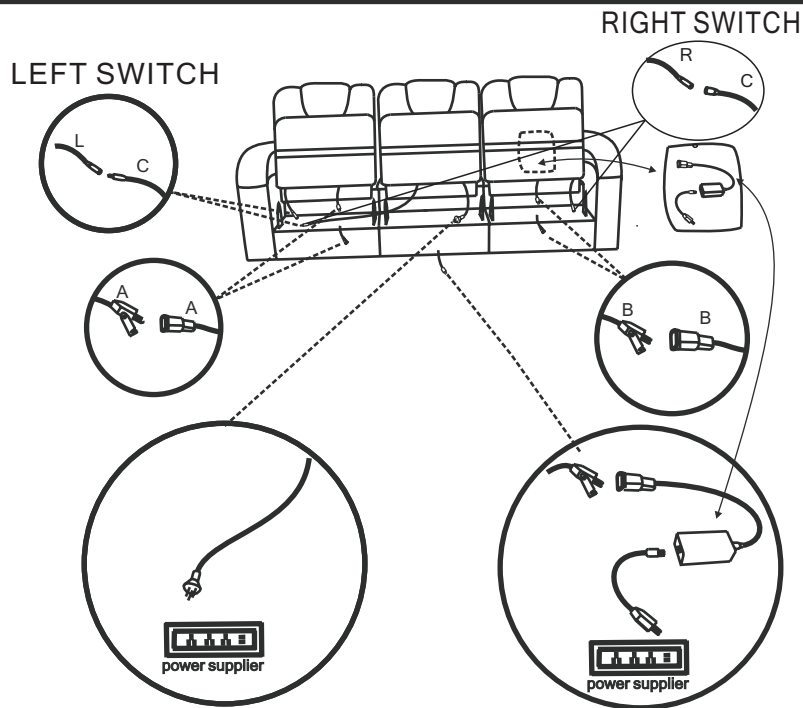

### SHOW 1

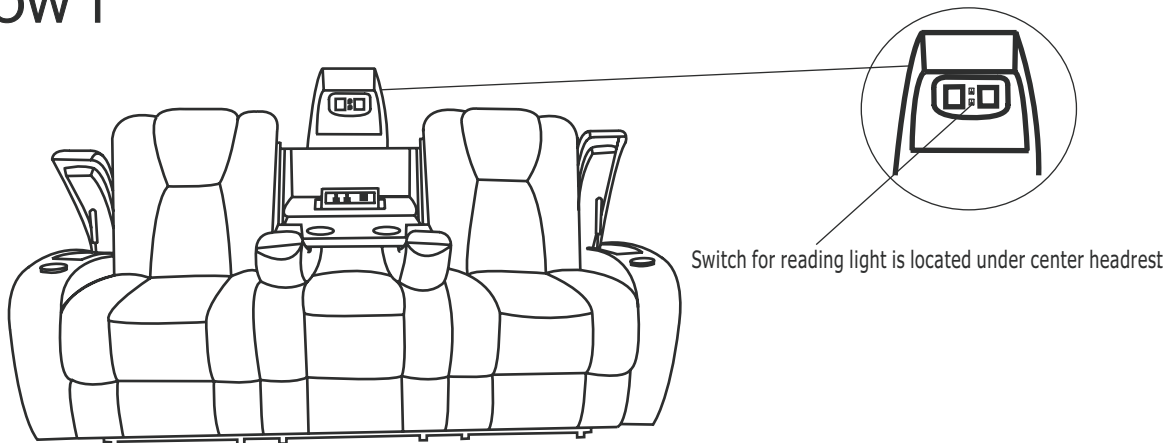

### SHOW 2

