


<b>No.</b>	<b>Parts Description</b>	<b>Parts Code No.</b>
1	Foamed Left Freezer Door	312090501813
2	Door seal	312240100170
4	Foamed cabinet unit	312090100405
5	Top door hinge plate	312019900050
6	Screw for top door hinge	312310200032
7	Screws for top cover	312310100001
8	Top Cover	312122400020
9	Light Switch box	312121100005
10	Glass shelf for fridge	312300200119
11	Foamed Right Fridge Door	312090501814
12	Door Bin	312121500128
13	Right door hinge lock	312129900151
14	Up Trim for evaporator	312122700126
15	Bottom Trim for evaporator	312122700127
16	Vegetable Crisper	312121500133
17	Freezer Evaporator	312200300267
18	Right door hinge plate	312031100076
19	Screws for door hinge plate	312310400016
20	Adjustable leg	312121900017
21	Cabinet Support leg	312039900121
22	Screws	312310200034
23	Electric Circuit Cover	312121100006
24	LED Lighting Circuit	312180200002
25	Thermostat	312180100001
26	Fresh Keeper box cover	312122300024
27	Screws	312310200034
28	Light Cover	312129900001
29	Thermostat knob	312121200001
30	Thermostat box	312121100045
31	Left door hinge plate	312019900049
32	Left door hinge lock	312129900151
33	Water tray	312121400015
34	Compressor	312200400356
35	Filter dryer	312200600004
36	Compressor bottom plate	312031000039
37	Screws	312310100004
38	Earth wire	312151300008
39	Washer	312319900003
40	Screws	312310100004
41	UL Power supply cord	312151100102

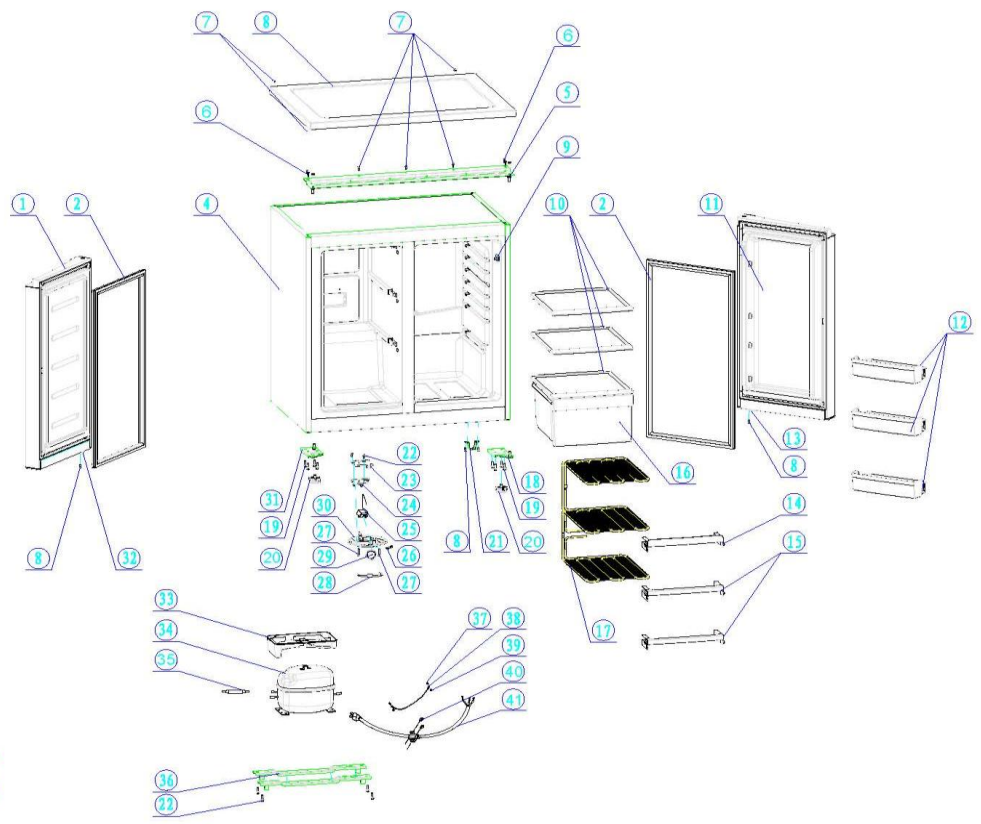

2  
 10  
 12