



# RMX45B3S Parts list

No.	Part Code	Description of Spare Part	Qty
1	20122080091	Door hinge cover	1
4	20122080036	Door hinge screw hole cover	1
5	3031400148	Upper door hinge,right	1
7	3059900015	Door switch	1
8	2100140291	Door	1
8.1	2200200064	Door gasket	1
8.2	2208510031	Right aid-closer,lower door	1
8.3	2208510032	Left aid-closer,lower door	1
9	2207500265	Door rack,upper	2
10	2207500264	Door rack,lower	1
11	20120030045	Cover of crisper drawer	1
13	20120020046	Shelf of refrigerator chamber assembly	1
14.1	2500500002	Lamp bulb	1
14.2	20122010037	Thermostat knob	1
14.3	20122010048	Lamp cover	1
14.4	20122010002	Thermostat cover	1
14.5	2400200012	Thermostat	1
14.6	2500600001	Lamp holder	1
16	20122990103	Ice cube tray	1
25	3031400067	Lower door hinge	1
26	20122990006	Short adjust leg	1
27	2100140289	Freezer Door	1
27.1	3020400025	Door Gasket,freezer door	1
27.2	20122090088	Handle spring	1
27.3	20122090089	Handle of freezer chamber door	1
28	2208200111	Hinge seat of star gate	1
29	2208200127	Braket of freezer chamber door	1
31	3039900128	Compressor support base	1
32	3050100117	Power supply cord plug	1
34	3050200095	Earthing wire of compressor	1
35	3040100320	Compressor	1
36	3040600005	Process tube	1
37	20114070006	Connecting tube	1
38	20122990046	Drain pan	1
39	3040500009	Drier filter	1
41	20122990601	Jewellery box	1
42	20122040308	Crisper drawer	1
43	20122990019	Long adjust leg	1