


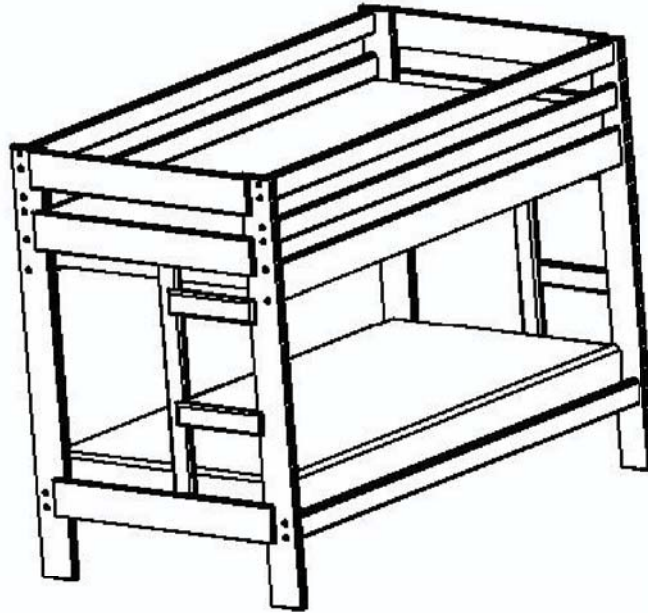

COASTER TETON TWIN/TWIN BUNK

7030-00399

4866/4867



PARTS LIST:

- A) 32-4 1/4" Lag Bolts
- B) 32-Black Steel Washers
- C) 2 -End Assemblies
- D) 2 -3 1/4" x 75" Mattress Rails w/Support Cleats
- E) 2 -5" x 75" Mattress Rails w/Support Cleats
- F) 4 -3 1/4" x 75" Guard Rails
- G) 6 -3 1/2" x 38 1/2" Mattress Supports
- H) 12-1 1/4" Wood Screws

TOOLS REQUIRED:

- 1) 7/16" Wrench or Socket Wrench
- 2) Phillips Head Screwdriver

NOTE: Tool recommended: Electric driver with 7/16" socket

ASSEMBLY INSTRUCTIONS:

NOTE:

Make sure you have all parts before beginning assembly. If you need a part, contact the dealer where you purchased your bed.

- 1) Attach two 3 1/4" x 75" mattress rails(D) to the lower portion of two end assemblies(C) with 8 lag bolts and 8 washers, and tighten.
- 2) Attach two 5" x 75" mattress rails(E) and four guard rails(F) to the top portion of the end assembly with 16 lag bolts and 16 washers, and tighten.
- 3) **Place 3 mattress supports on mattress rail support cleats on top bed assembly, with one support in the center, and a support pushed tightly against each end assembly. Repeat with 3 mattress supports on bottom bed assembly.**
- 4) **Secure mattress supports with 12 wood screws.** A FOUNDATION IS REQUIRED WITH 3 SLAT CONFIGURATIONS
- 5) Add the foundation and proper thickness mattress.(See dealer for details)