

There's fresh and then there's **Electrolux fresh**

Getting started with your new Multi-Door Refrigerator



Before you begin

- **Before starting your refrigerator**

Remove tape and glue residue from surfaces before turning on the refrigerator. Choose a place that is near a grounded electrical outlet, allowing clearances for ease of installation, proper circulation, and plumbing and electrical connections.

- **Set up your refrigerator**


After you remove all of the package materials, clean the inside of your refrigerator before using it. See CARE AND CLEANING in your Use & Care Guide.

Turn over for USE instructions.

Care and cleaning



Keeping your refrigerator clean maintains its appearance and prevents odor build-up. Wipe up any spills immediately and clean the freezer and fresh food compartments at least twice a year.

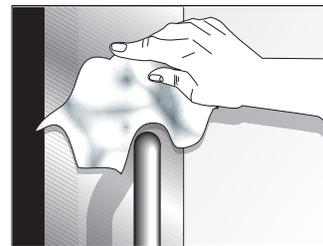

Clean stainless steel front and handles with non-abrasive soapy water and a dishcloth. Rinse with clean water and a soft cloth.

FAQ

- **How do I know which water filter I need for my refrigerator?**

When it comes to your water filter, compatible isn't comparable. Frigidaire Genuine filters offer 3 levels of carbon filtration that trap sediment, chemicals, and harmful impurities. Compatible or look-alike filters aren't guaranteed to offer the same water quality.

It's always important to use the same filter type that is currently in your refrigerator. Most Owner's Manuals will provide you the water filter information specific to your model.

- **Why does my refrigerator run most of the time? Is this normal?**

Today's refrigerators are designed to be more energy efficient than previous models. This means that they run longer cycles, or run continuously, to maintain an even temperature inside.

See Use & Care Guide and Installation Instructions for additional information.

1 Get ready

Your Electrolux refrigerator is designed for optimal convenience and storage flexibility. We recommend familiarizing yourself with product features and terminology in your Use & Care Guide..

2 You're in Control

TEMP SETTINGS

Select compartment for temperature change (FREEZER OR REFRIGERATOR). Press either the + or - to adjust to desired temperature setting. This unit is designed to operate at 37°F Refrigerator/0°F Freezer. Unit should stabilize temperatures within 24 hours of installation.

CLEAR ALERTS

Resets any alarms that are active and illuminated on the display.

FREEZE BOOST

Activates a faster rate for freezing food in the freezer. Use this feature when loading several items into the freezer at one time. Automatically deactivates after 12 hours.

TEMP F-C

Press to toggle between F & C.

ICE MAKER

For the Ice Maker inside the refrigerator, press and hold for 3 seconds to turn ice maker on/off. When indicator is lit, ice maker is on. When indicator is not lit, ice maker is in the OFF state and will stop making ice. While off, ice dispensing can continue as long as there is ice in the bucket

DEFAULT SETTINGS

Press and hold for 3 seconds to reset to default settings.

WATER FILTER


Status is shown at right of button. After replacing filter, press and hold for 3 seconds to reset. Status will reset to GOOD.

AIR FILTER

Status is shown at right of button. After replacing filter, press and hold for 3 seconds to reset. Status will reset to GOOD.

3 Select Ice & Water

Use this control panel to make your ice and water dispensing selections.

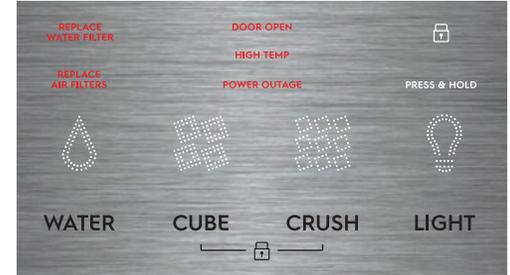

REPLACE WATER FILTER

When illuminated, indicates it is time to replace water filter.

REPLACE AIR FILTER

When illuminated, indicates it is time to replace air filter.

WATER

Press the "WATER" key to select water.

CRUSH

Press the "CRUSH" key to select crushed ice.

CUBE

Press the "CUBE" key to select cubed ice.

LOCK

Press and hold CUBE & CRUSH keys simultaneously for 3 seconds to LOCK/ UNLOCK control panel. When control panel is locked, no water or ice can be dispensed.

LIGHT


Press the "LIGHT" key to select light feature.

This model offers a TempAdapt Drawer.



Use this drawer to customize storage of your favorite foods and beverages like meat, cold drinks, snacks and wine. There's even a freezer option (see Use & Care Guide).

When TempAdapt drawer is locked, press and hold the UNLOCK icon for 3 seconds to unlock the drawer.

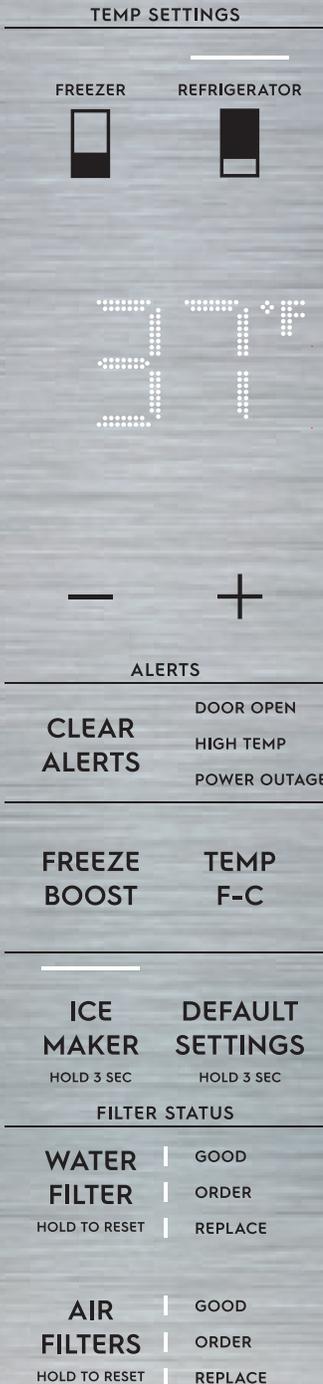

To register, visit electrolux.com, electrolux.ca, or use photo registration. Look for the  on your registration card.

See Use & Care Guide and Installation Instructions for additional information.