

## A Quick Guide to Getting Started



\* Please note your model may look slightly different than pictured.

### Before you begin

- Double check that all shipping materials are removed from your new washer.
- Read your Use & Care Manual to familiarize yourself with your new washer.
- Run the washer through a complete cycle and check for water leaks and proper operation.

### Care and cleaning

- Detergent and fabric softener may build up in the dispenser drawer. Clean the drawer by removing and rinsing under hot tap water.
- Run the Clean Washer cycle with bleach or PureAdvantage™ Probiotic Washer Cleaner once a month to clean and freshen the washer. See your Use & Care Manual for additional cleaning instructions.



### Important to note:

Your washer will remind you to run the clean washer cycle every 50 cycles. It is a good practice to clean the dispenser drawer at this time as well. Leaving the washer door and dispenser drawer open after use will allow condensation to dry and temper odors and residue.

## FAQs

### • How do I use my detergent dispenser?

Take care not to fill any compartment in your dispenser beyond the maximum line. If your washer is equipped with an Adaptive Dispenser™, add liquid bleach, fabric softener, and stain treating additives to the labeled compartments as needed, taking care not to overfill any compartment or use more than 2 detergent packs in the compartment.

### • Is it normal for my washer to make sounds?

Some sounds are part of your washer's normal operations. You may hear the drain hose, water valves or pumps moving water through the cycle. Check your Use & Care Manual to learn more.

### • Can I open the washer door during a cycle?


If you need to add a forgotten item, press PAUSE and wait for the door to unlock. Add your item, close the door and press START to resume the cycle.



Remember to select PODS® on the display options when using detergent packs. This option will stay selected until you press to deactivate.



# Getting Started

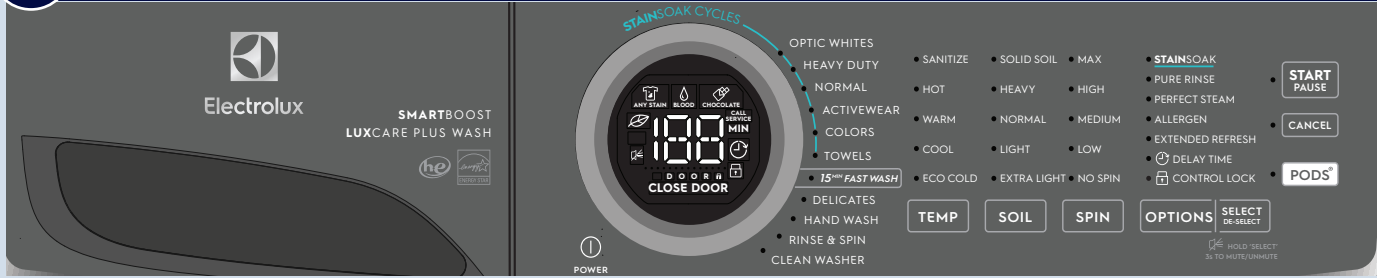

\* Your model may look slightly different than pictured. See your Use & Care Manual for more information on each cycle, setting & option.

## Turn on your washer

Press the POWER button to turn on your unit

## Select a cycle

Turn the cycle selector in either direction or press the cycles button (depending on your model) to scroll to the desired cycle.

**WHITES/WHITEST WHITES/OPTIC WHITES**  
Select for white and light-colored fabrics. This cycle varies by model.

**HEAVY DUTY**  
Select for heavily soiled, durable garments.

**NORMAL**  
Select to wash cotton, linen, towels, sheets, denim and mixed loads.

**ACTIVEWEAR**  
Available on 500 & 600 series, select for lightweight synthetic apparel.

**COLORS**  
Available on 500 & 600 series, select for lightly soiled dark or dyed fabrics susceptible to dye loss.

**TOWELS**  
Available on 500 & 600 series, select for loads of towels or durable garments.

**FAST WASH**  
Washes a small, lightly soiled load in 15, 18, or 20 minutes depending on your washer series.

**DELICATES**  
Select for lightly soiled knits and delicates.

**HAND WASH**  
Available on 600 series, select for small loads of lightly soiled and very delicate fabrics.

**RINSE & SPIN**  
Select to run a cold rinse or to add fabric softener missed in a regular cycle.

**CLEAN WASHER**  
Select to clean the washer tub.

## Select cycle settings

**TEMP**  
The water temperature is determined by the chosen cycle. Press the TEMP button to change the temperature setting. Not all temperatures are available with every cycle.

**SANITIZE**  
Available on 400, 500 & 600 series, select to clean and sanitize heavily soiled, colorfast fabrics such as bedding and children's clothing.

**ECO COLD**  
Uses cold tap supply during wash and rinse cycle. For use with fabrics and colors that are prone to dye transfer.

**SOIL**  
Press the SOIL button to adjust the wash time based on the soil level of the load.

**SPIN**  
Press the SPIN button to adjust the spin speed. Increasing the spin speed will extract more water, decrease drying time, and conserve energy.

## Select options

Press the OPTIONS button to scroll through the options until the indicator light for the desired option flashes, then press SELECT.

**STAIN TREAT/STAIN SOAK**  
Available on 400, 500 & 600 series, select this option to add an initial wash period to available cycles using the stain treatment additives in the stain soak/treat compartment. The load will advance to the main wash cycle once this phase is complete.

**PERFECT STEAM™**  
Available on 400, 500 & 600 series, select this option to add approximately 20 minutes of tumbling in steam.

**ALLERGEN**  
Available on 500 & 600 series, uses a higher wash temperature to remove dust mites and dander from washable items.

**EXTRA RINSE/PURE RINSE**  
Available on 400, 500 & 600 series, use this option when additional rinsing is desired to remove excess dirt and detergent residue.

**EXTENDED REFRESH**  
Select extended refresh if you will be unable to remove the load right after the cycle is complete. The washer will rinse and spin to keep the load fresh for up to 12 hours. Press cancel to end the cycle and open the door.

**PODS®**  
Select the PODS® option when using the detergent pack compartment. This option will remain active until you press PODS® again to deselect it.

**CONTROL LOCK**  
To lock the controls between cycles, scroll to the CONTROL LOCK option and press select. The control lock icon will show on the LED display.

**DELAY TIME**  
Use delay time to delay the start of the washing cycle from 30 minutes to 12 hours.

## Start load

Close the door and press the START/PAUSE button.

## Learn More

We recommend familiarizing yourself with product features and terminology in your Use & Care Manual.



### Peace of Mind & Protection

Unlock exclusive benefits by registering your product with us. Review your registration card for all the ways to register or visit us online directly.

electroluxappliances.com  
(877) 435-3287

10200 David Taylor Drive  
Charlotte, NC 28262

electroluxappliances.ca  
(800) 265-8352

5855 Terry Fox Way  
Mississauga, ON L5V 3E4