

## A Quick Guide to Getting Started



### Before you begin

- **What's included in my literature packet?**  
Your literature packet includes both a PureAdvantage® Air Filter and a Produce Keeper™ Refill packet, and a door alignment kit. Reference your Use & Care Manual (also included in your packet) for instructions on how to install these items and detailed information on your refrigerator.
- **Before starting your Refrigerator**  
Clean the inside of your refrigerator before using it. See **CARE AND CLEANING** in your Use & Care Manual. To ensure safe food storage, allow the appliance to operate with the door closed for at least 8 hours before loading it with food.

### Care and cleaning

- Immediately wipe up any spills and clean your refrigerator at least twice per year.
- Clean your refrigerator with non-abrasive soapy water and a dishcloth. Rinse with clean water and dry thoroughly.
- Keep fresh air and clean water flowing by changing your filters every 6 months.

### FAQs

- **How do I use the water dispenser?**  
Your refrigerator is equipped with an internal water dispenser mounted inside the cabinet, on the left hand fresh food door. Your appliance will arrive with the water dispenser already activated and ready to use. Before dispensing, please ensure you enable **WATER DISPENSER** on the display (LEDs above the button are lit). Place a cup against the paddle, and press to dispense water to use the dispenser. We recommend holding the door with one hand while dispensing water to keep the door from moving and possibly dispensing water on the floor.
- **Why does my refrigerator seem to run continuously?**  
Your refrigerator is equipped with an energy-efficient variable speed compressor that saves energy by running more frequently.

#### Your Filters:

**ELXPAAF2**  
PureAdvantage®  
AF-2™ Air Filter

**EPPWFO1**  
PureAdvantage®  
PWF-1™ Water & Ice Refrigerator Filter

**ELPAPKRF**  
PureAdvantage® Produce Keeper™ Refill



## ▶ Getting Started

Once you plug the unit in, the settings icon illuminates when you open the refrigerator door. Pressing the settings icon illuminates all icons on the appliance control display. All icons except the settings icon will fade after 10 seconds of no interaction or if you close the door.

## 👍 Learn More

Your Electrolux refrigerator is designed to preserve a variety of foods with customizable layouts. We recommend familiarizing yourself with product features and terminology in your Use & Care Manual.



## 🔧 Manage Your Display



### CHANGE TEMPERATURE

Select the **FREEZER** or **REFRIGERATOR** icon to change the temperature. Press +/- to set the temperature.

Freezer control range: -6°F/-21°C to 6°F/-15°C  
Refrigerator control range: 34°F/1°C to 44°F/7°C

### CLEAR ALERTS

Resets any active alarms illuminated on the appliance control display (**DOOR OPEN, HIGH TEMP, POWER OUTAGE**).

### FREEZE BOOST

Prior to grocery shopping, we recommend you activate **FREEZE BOOST** to lower the temperature and freeze food faster.

### F/C

Press to toggle between Fahrenheit (°F) and Celsius (°C).

### WATER DISPENSER

Press and hold for 3 seconds to turn off and on. When you turn the water dispenser on the LEDs above **WATER DISPENSER** illuminate.

### DEFAULT SETTINGS

Press and hold for 3 seconds to reset to factory settings.

### WATER FILTER

Press and hold for 3 seconds to reset the status after you replace the filter. The status shown at the right of the button resets to **GOOD**.


### AIR FILTERS

Press and hold for 3 seconds to reset the status after you replace the filters. The status shown at the right of the button resets to **GOOD**.



## Sustainability, together

We're committed to making food last longer with our TasteLock™ Plus Crispers to help you waste less.

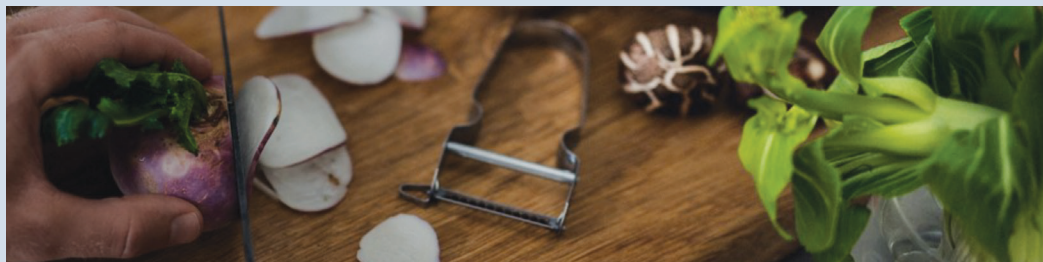

### Peace of Mind & Protection

Get more with product registration. Look for the photo icon on your registration card to text and register, or visit us online.

electrolux.com  
(877) 435-3287

10200 David Taylor Drive  
Charlotte, NC 28262

electrolux.ca  
(800) 265-8352

5855 Terry Fox Way  
Mississauga, ON L5V 3E4