

## A Quick Guide to Getting Started




\* Please note your model may look slightly different than pictured.

### ⏻ Before you begin

- Double check that all shipping materials are removed from your new dryer.
- Read the Use & Care manual to get familiar with your new dryer.

### + Care and cleaning

- The dryer is equipped with a clamshell style LuxCare™ Lint Shield filter which must be opened to remove lint collected during a drying cycle. Press the OPEN button to clean the lint filter after every load. See your Use & Care Manual for complete instructions on how to clean your filter.
- A waxy build-up from fabric softener sheets may form on the lint filter or moisture sensing bars. Clean the filter periodically with warm, soapy water, and dry thoroughly before replacing.

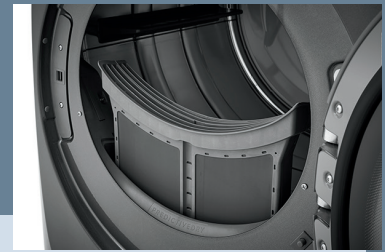

#### Important Reminder:

Regularly check the entire outdoor exhaust and venting system and clean any lint build up.

## ? FAQs

### • What can I do to optimize the drying performance?


After ensuring your lint filter is clean, check to make sure the cycle and settings selected are the right ones for your load type. Avoid overloading your dryer as items need room to tumble freely and use the DRY BOOST option to increase the drying temperature for select drying cycles.

### • Is it normal for my dryer to make sounds or noises?

Some sounds are part of your dryer's normal operations. You may hear the suspension rollers or exhaust system moving air through the cycle. For gas models, you may hear a clicking sound as the gas valve opens and closes to control the gas flow. Check your Use & Care Manual to learn more.

### • How do I add a forgotten item to the load?

To add an item to the dryer, press START/PAUSE, add the item, close the door and press START/PAUSE again to resume the cycle.

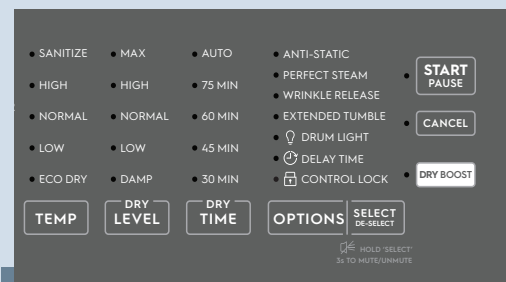

Cycle settings and options revert to default settings each time the dryer is used. The cycle selector, temperature, and dryness level will be set to normal.



# ▶ Getting Started



\* Your model may look slightly different than pictured. See your Use & Care Manual for more information on each cycle, setting & option.

## ▶ Turn on your dryer

Press the POWER button to turn on your unit

## ▶ Select a cycle

Turn the cycle selector in either direction or press the cycles button (depending on your model) to scroll to the desired cycle.

### ALLERGEN

Available on 500 & 600 series, for allergen reduction, not for delicate items.

### BULKY

Available on 300 & 400 series, for large loads and durable fabrics.

### HEAVY DUTY

For large loads and durable fabrics.

### NORMAL (ECO FRIENDLY)

For everyday loads including cotton, linen or sheets. Select the Dry Boost option if needed.

### ACTIVEWEAR

Available on 500 & 600 series, for lightweight, synthetic, athletic and stretch fabrics.

### MIXED LOAD

Available on 500 & 600 series, for mixed fabric loads.

### TOWELS

Available on 300, 500 & 600 series, for drying loads of towels.

### FAST DRY

Dries small loads consisting of a few items in 15, 18, or 20 minutes depending on your dryer model.

### DELICATES

For knit and delicate fabrics.

### AIR DRY (no heat)

Available on 600 series, for small loads of delicate items.

### TIME DRY

Various drying times and temperature settings can be selected.

### INSTANT REFRESH

Available on 400, 500 & 600 series, uses steam to refresh fabrics, remove odors and reduce static.

## ▶ Select cycle settings

### TEMP

Press the TEMP button to select the desired dry temperature setting.

### SANITIZE

Available on 400, 500 & 600 series, for removing harmful bacteria from your clothing or other items. Check fabric care labels to prevent damage.

### HIGH

For most cotton fabrics.

### NORMAL

For wrinkle free, easy care, lightweight fabrics and bulky loads.

### LOW

For delicate fabrics.

### ECO DRY (NO HEAT)

Use with a time dry cycle to dry items containing feathers, down, foam rubber, plastics or rubber-like materials.

### DRY LEVEL

Select to choose the desired dryness level. The dryness levels include MAX (on select models), high, normal, low, and damp. Select damp for items you wish to partially dry before hanging or ironing. Not all dryness levels are available with every cycle.

### DRY TIME

Press the DRY TIME button to choose a dry time of 30-75 minutes for a manual dry time cycle.

### AUTO

Automatically dries at the selected temperature to the desired dryness level.

## ▶ Select options

Press the OPTIONS button, turn the cycle selector in either direction to scroll to the desired option then press SELECT to set

### PERFECT STEAM™

Available on 400, 500 & 600 series, injects steam prior to cool down to reduce wrinkles and static.

### ANTI-STATIC

Available on 500 & 600 series, injects steam just prior to cycle end to reduce static.

### EXTENDED TUMBLE

Select to extend tumble time for 30 minutes without heat if the dried load won't be promptly removed at cycle end.

### DRUM LIGHT

Select to enable or disable the drum light option.

### DRY BOOST

Increases the drying effectiveness for heavier fabrics or bulky loads by increasing the drying temperature by less than 20°F (>1°C). (Varies based on cycle selection).

### WRINKLE RELEASE

Select to help prevent wrinkles and tangling by tumbling the dry load without heat for 5 minutes out of every 10 minutes.

### CONTROL LOCK

Select to lock the controls between cycles Repeat to deactivate.

### DELAY TIME

Use delay time to delay the start of the drying cycle to a time convenient to your schedule or during off-peak energy hours.

## ▶ Start load

Close the door and press the START/PAUSE button.

## ▶ Learn More

We recommend familiarizing yourself with product features and terminology in your Use & Care Manual.



### Peace of Mind & Protection

Unlock exclusive benefits by registering your product with us. Review your registration card for all the ways to register or visit us online directly.

electroluxappliances.com  
(877) 435-3287

10200 David Taylor Drive  
Charlotte, NC 28262

electroluxappliances.ca  
(800) 265-8352

5855 Terry Fox Way  
Mississauga, ON L5V 3E4