

DISHWASHER: Sabbath Mode does not have a delay start.

OPEN DRAWER AUTO POWER-ON (SUITABLE AS A SABBATH OPTION)	TURN TONES OFF	CLOSED DRAWER AUTOLOCK
Your dishwasher is factory-set to automatically power on for 30 seconds whenever you open the drawer. You can turn this setting off.	This turns all tones off except for fault alerts.	When this setting is on, the drawer will automatically lock 30 seconds after it's closed. Useful in boats or motorhomes. To unlock DD*C & DD*A MODELS: Unlock by pressing ⓪ (unless Keylock or Childlock is also activated). DD*D MODELS: Unlock by pressing and holding ▶▶ on the dishwasher door. DD*I MODELS: Unlock by knocking once on the dishwasher drawer.

DD*A & DD*C MODELS ONLY:

How to change the setting of an option

- ① **CHECK**
Check that there is no wash in progress, press **⓪**
- ② **ENTER MENU**
To enter the menu: Press and hold the **▶▶** and **▶▶** together for four seconds.
 - You are now in the Rinse aid option of the preference options menu.
 - If you want to change the Rinse aid setting, go to step 4 now.
- ③ **SCROLL TO OPTION**
Press **▶▶** to scroll to the next option (see table below for options).
When you have scrolled to the end of the sequence, the menu will start again with Rinse aid.
- ④ **CHANGE SETTING**
Press **▶▶** to change the setting within an option (see table below for settings).
- ⑤ **SAVE SETTING & QUIT MENU**
Press **⓪**. This will save the new setting and quit the preference options menu.

OPTION	RINSE AID	WATER SOFTENER (SOME MODELS ONLY)	OPEN DRAWER AUTO POWER-ON (SUITABLE AS A SABBATH OPTION)	TONES AT END OF WASH	CLOSED DRAWER AUTOLOCK
Which option am I in?	rR	Hd	AP	bP	Ld
Possible settings	Off to Max (rA5)	Off to Max (Hd5)	On or Off	On or Off	On or Off
Example	setting is 1 rR1	setting is 1 Hd1	On APo	On bPo	On Ldo
	setting is 4 rR4	setting is 4 Hd4	Off AP-	Off bP-	Off Ld-

5

DD*D & DD*I MODELS ONLY:

How to change the setting of an option

- ① **CHECK**
Check that there is no wash in progress, then open the drawer.
- ② **ENTER MENU**
To enter the menu: Press and hold the **▶▶** and **★** together for four seconds.
 - You are now in the Rinse aid option of the preference options menu.
 - To change the Rinse aid setting, go to step 4 now.
- ③ **SCROLL TO OPTION**
Press **★** to scroll to the next option. The wash modifier indicators will display which option is selected (see table below).
When you have scrolled to the end of the sequence, the menu will start again with Rinse aid.
- ④ **CHANGE SETTING**
Press **▶▶** to change the setting within an option.
The wash program indicators will display which setting is selected (see table below).
- ⑤ **SAVE SETTING & QUIT MENU**
Press **▶-**. This will save the new setting and quit the preference options menu.
Note: If at any time, you want to exit the menu, press and hold **▶** to cancel (**X**).

Double models only:

You can use either drawer to change the settings.
Changing the settings in one tub will set your preferences for the whole dishwasher.