


## WALL OVENS:

### SABBATH SETTING



This setting is designed for religious faiths that observe a 'no work' requirement on the Sabbath.

#### While your oven is in Sabbath setting


- The display, dial halos and indicators will be unlit, the controls will be unresponsive.
- No tones or beeps will sound.
- No alert codes or temperature changes will be displayed.
- The oven lights will stay on. If you want the oven lights to be off during Sabbath setting, first select the 'Lights off' option as described in 'User preference settings', and only then set Sabbath setting.
- Bake  is the only function available in Sabbath setting.

#### How to set Sabbath setting



 
- ① Press and hold the scroll   buttons together for 3 seconds to enter the user preference menu.



 
 
- ② Press the right scroll  button to scroll to the Sabbath setting.
- ③ Press the select button to select Sabbath setting.
  - The default option is 'Sabbath off'.

### SABBATH SETTING



- ④ Press the select  button to activate the option.
  - The display will flash 1:00.



- ⑤ Press the scroll   buttons to set the time (hrs). You may set the time for up to 99 hours.

- ⑥ **Double oven models only:**  
Select the oven(s) you wish to use by pressing the UPPER or LOWER oven selector button

 


- ⑦ Turn the function dial to Bake.



 
- ⑧ Adjust the temperature.

- ⑨ **Double oven models only:**  
If required, repeat the process for the second oven (by pressing UPPER or LOWER at step 4b)

- ⑩ Press the select  button to activate.

The display, indicators and dial halos will be unlit and unresponsive, but the oven will be on until the time set elapses or you quit Sabbath setting.

#### To quit Sabbath setting

Press and hold the cancel  button until the time of day appears in the display and the oven(s) turn off.