



Unbranded Model: 285320

Washing Machine Siphon Break Assembly

Color Other

Product Description

This Washing Machine Siphon Break Assembly is designed for use with rubber and plastic drain hose applications. This universal design is compatible with washer models; check to see if your model number is compatible. The washer water siphon break provides an air gap in the drain to prevent the siphoning of dirty water back into the tub. Replacing this accessory will require basic hand tools, some disassembly of the washer and novice repair experience. You must unplug the washing machine or shut off the house circuit breaker for the appliance before installing this part. Also make sure you turn off your hot and cold water supplies.

Specifications

Dimensions

Gross Weight	0-13/50
---------------------	----------------

Key Features

This product is a Factory Certified Accessory. These Package contains (1) Washing Machine Siphon Break
You will be redirected to Repair Clinic, which
Tools Needed: Screwdriver and utility shears
30-Day Return Policy

UPC Listing

Model : 285320	UPC : 050946217536
-----------------------	---------------------------