




## **30" FREESTANDING ELECTRIC RANGE**

### **MODELS:**

WFE320M0JB0 (Black)

WFE320M0JW0 (White)


# COOKTOP PARTS

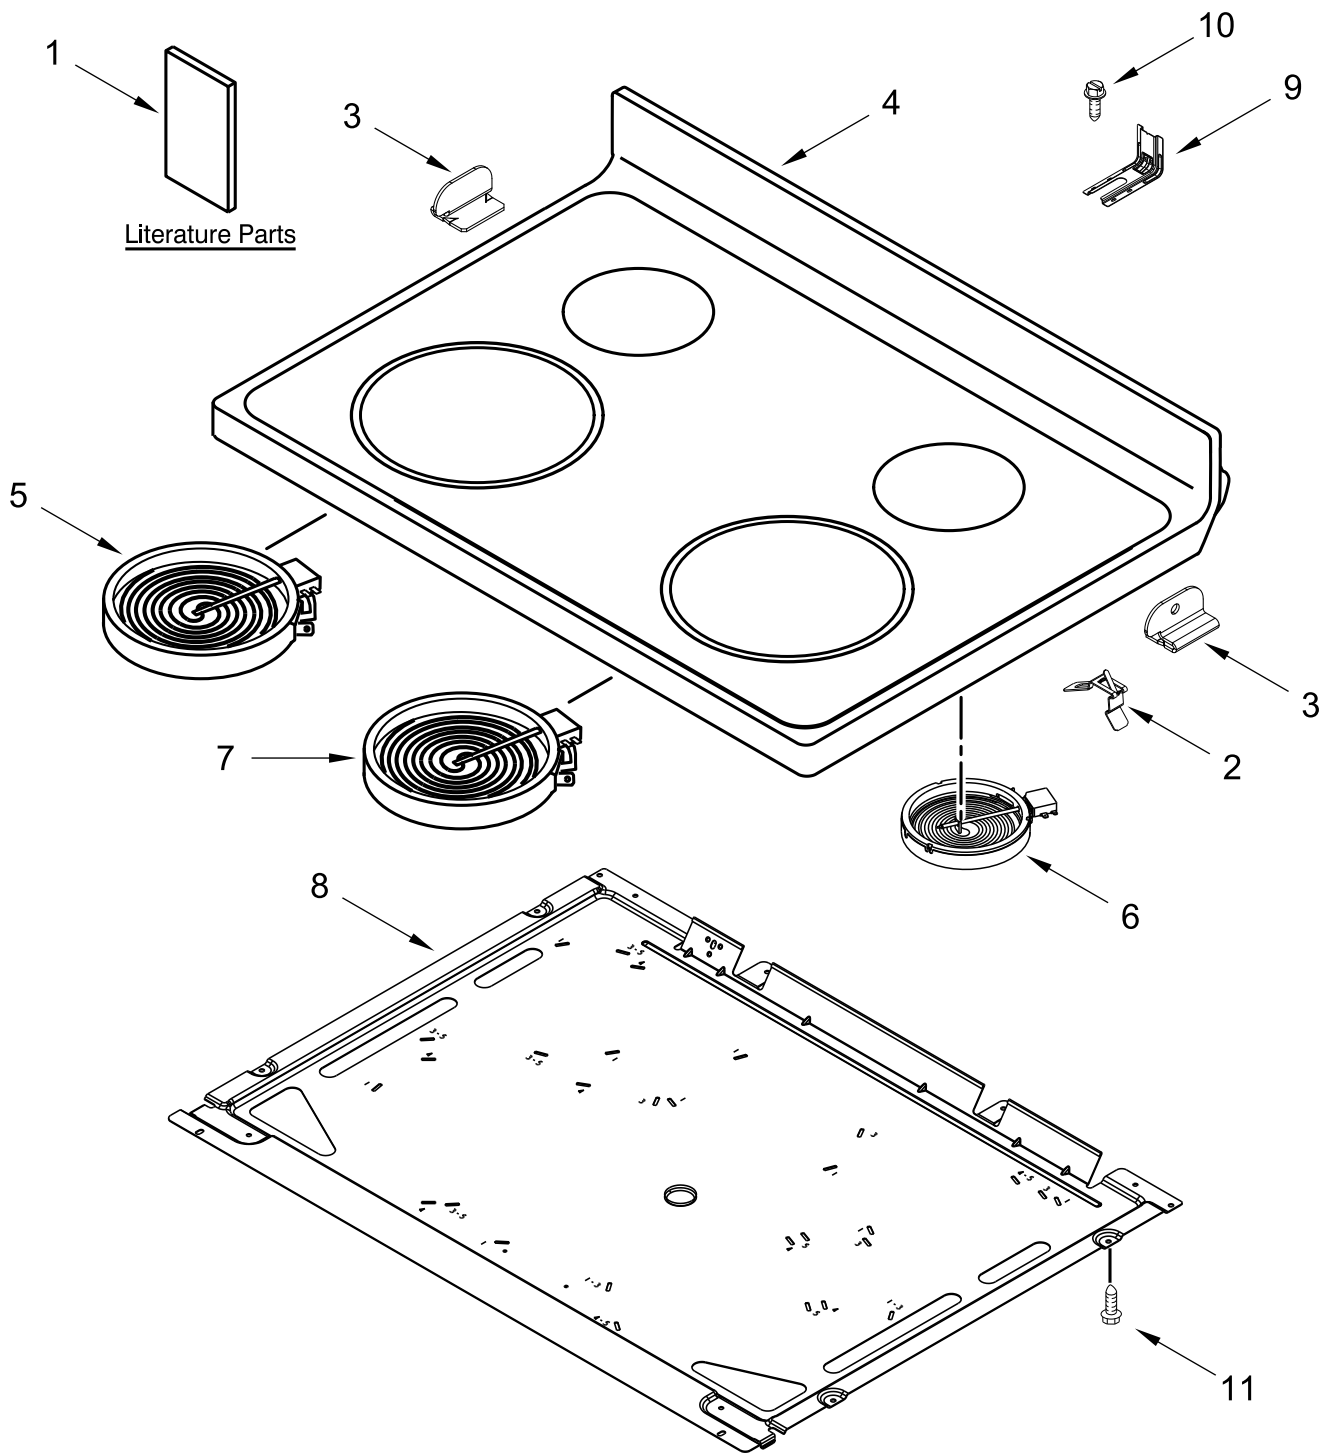

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4		Cooktop	8	W10691223	Pan, Radiant Element
	W11333124	Use and Care Guide		W11034830	Black	9	W11379945	Bracket, Anti-Tip
	W11333088	Installation Instructions		W11034829	White	10	7101P485-60	Screw, Anti-Tip Kit
	W11351204	Wiring Diagram	5	W10275048	Element (3000/1400W)	11	3196169	Screw
	W11351201	Tech Sheet			(Left Front)			FOLLOWING PARTS NOT ILLUSTRATED
2	W10225448	Spring, Element	6	W10248261	Element (1200W)		W11344559	Harness, Main
3	W10607641	Bracket, Cooktop (Left)			(Left Rear and Right Rear)		W11134603	Harness, Cooktop (Left)
	W10607642	Bracket, Cooktop (Right)	7	8273992	Element (2500W)		W11134551	Harness, Cooktop (Right)
					(Right Front)			


# CONTROL PANEL PARTS

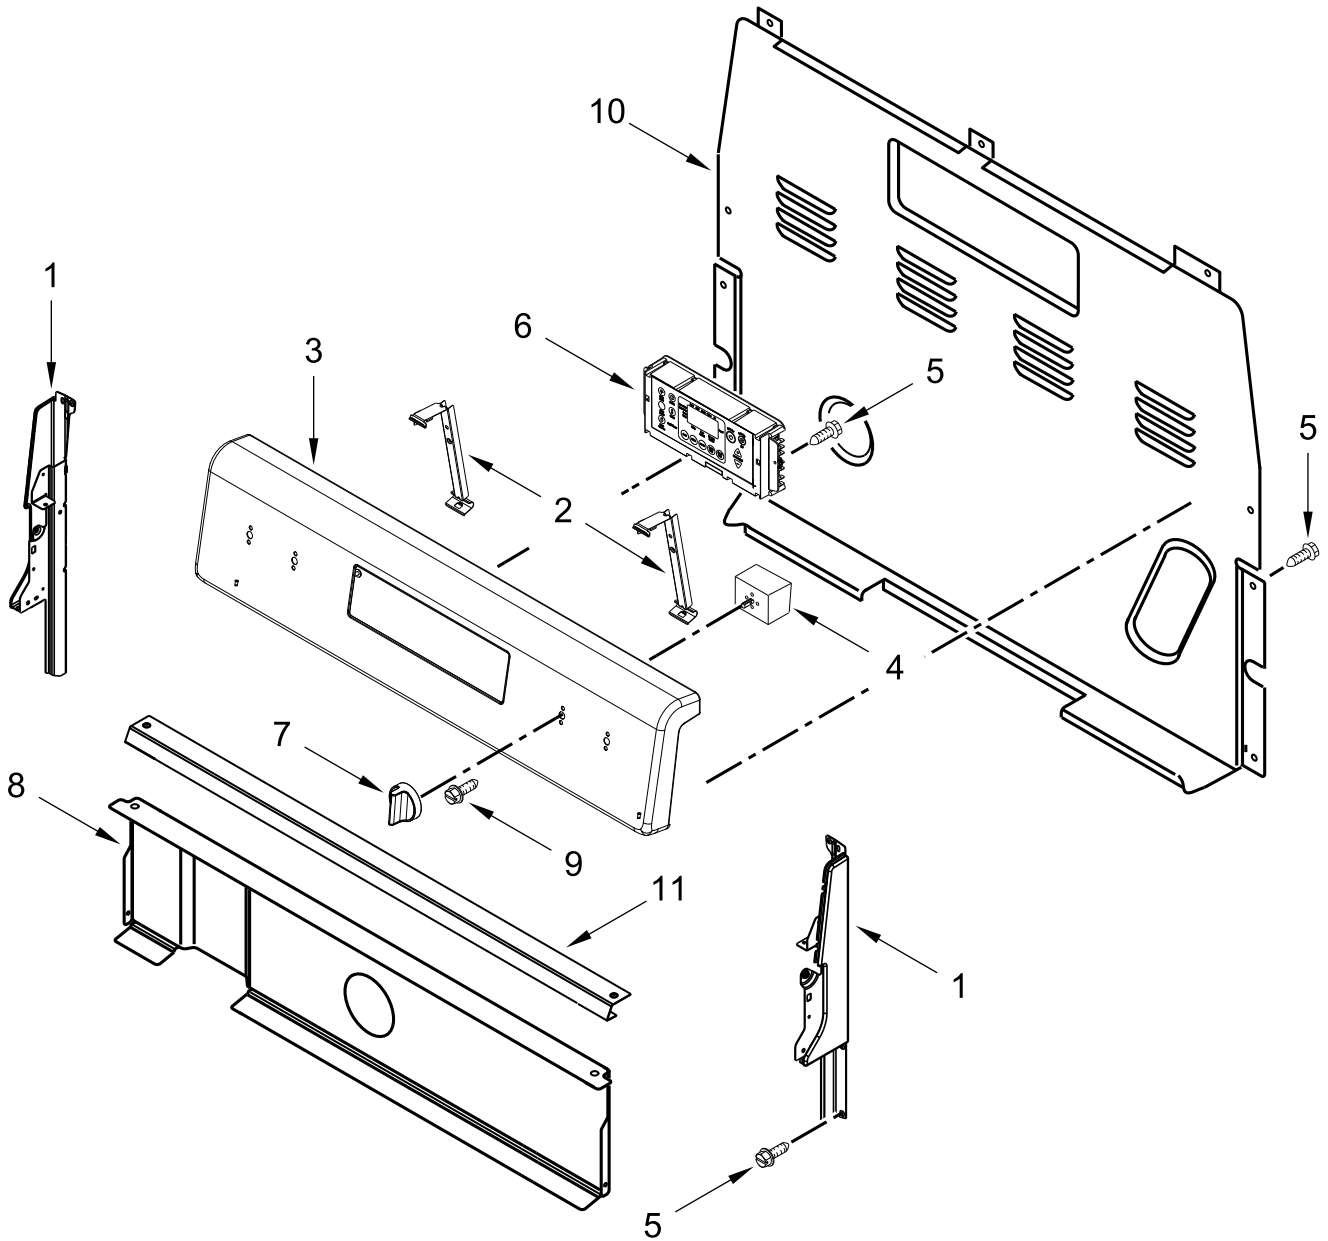

# CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10434452	Switch, Infinite (Dual)	6		Control, Electronic (LCX)
	W11130372	Black (Left)			(Left Front)		W11342871	Black
	W11130379	Black (Right)		3148951	Switch, Infinite		W11342869	White
	W11130371	White (Left)			(Left Rear and Right	7		Knob
	W11130378	White (Right)			Rear)		W11022718	Black
2	W10695491	Bracket, Control		3148954	Switch, Infinite		W11022720	White
3		Console, Assembly			(Orange)	8	W10134247	Shield, Heat
	W11027385	Black			(Right Front)	9	3400882	Screw
	W11027386	White	5	3196178	Screw	10	8272473	Cover, Upper Rear
						11	W10525121	Bracket, Console Mounting


# CHASSIS PARTS

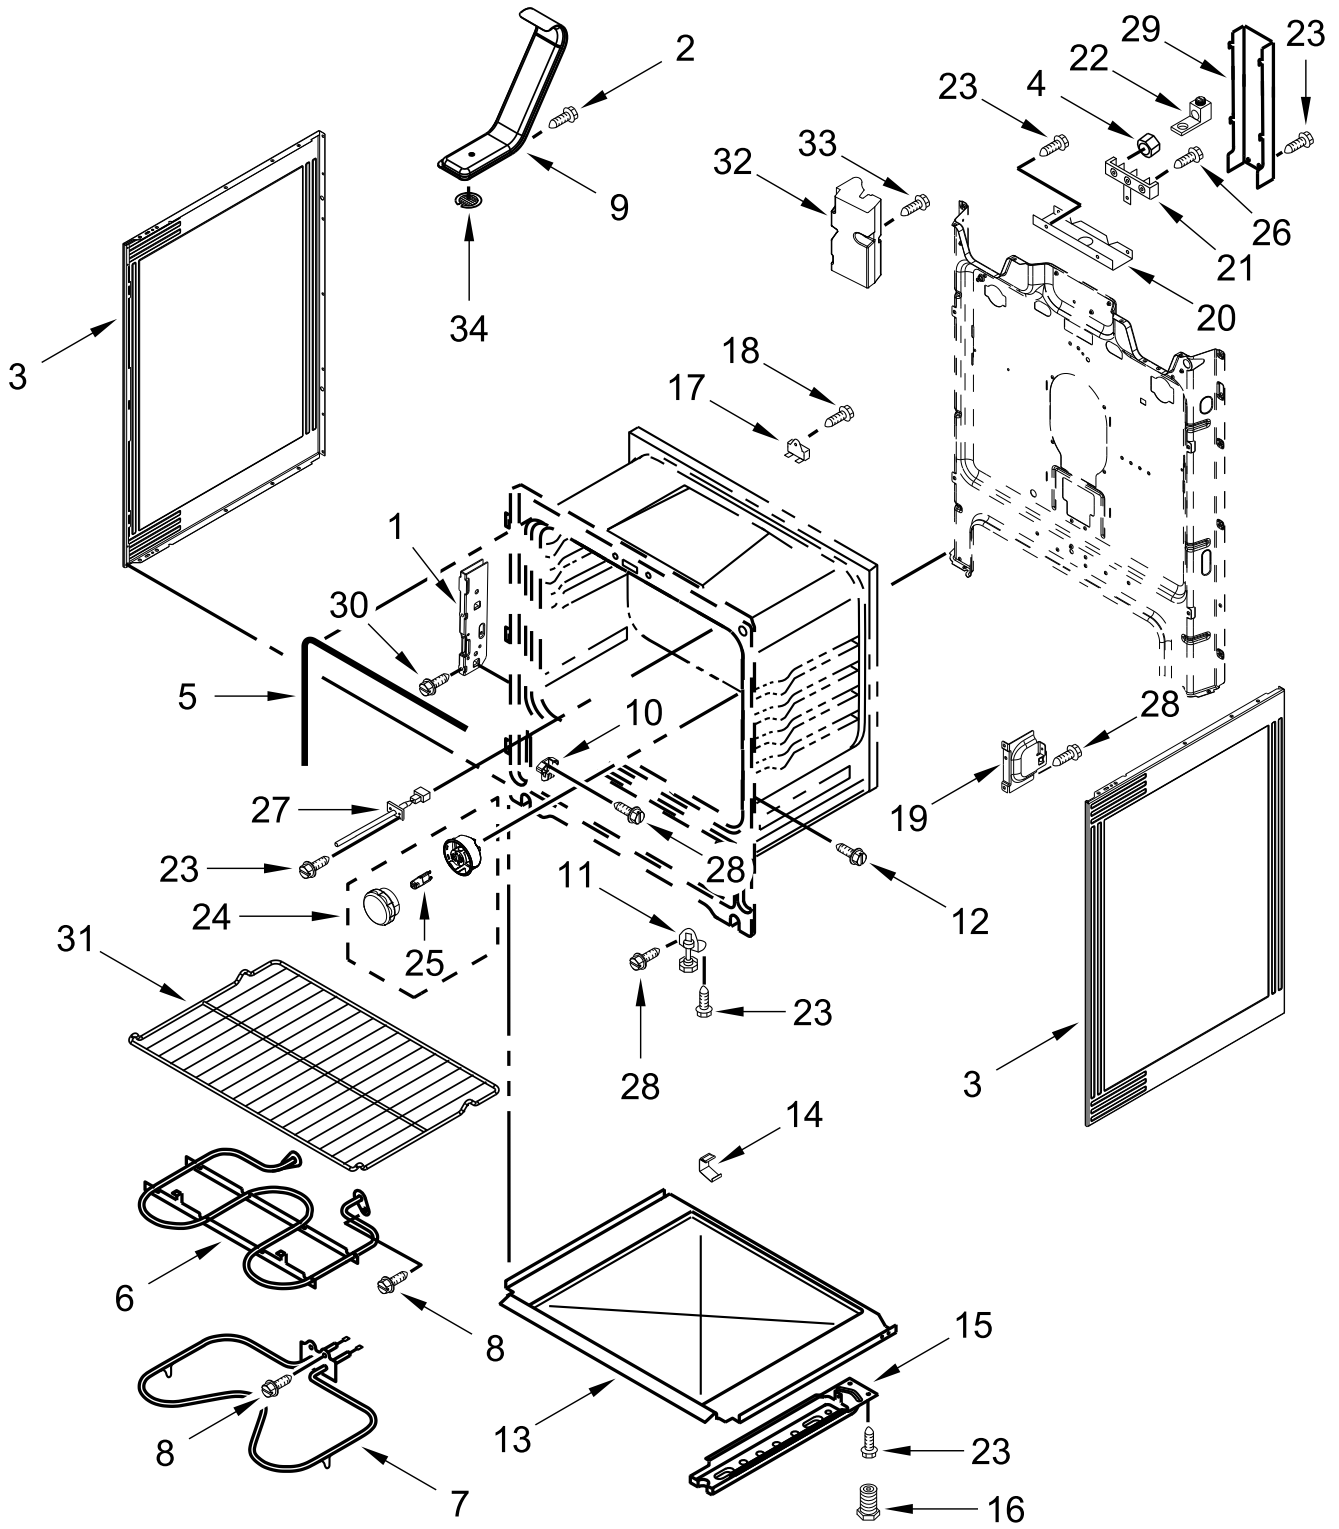

# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	15	W10390008	Base Rail Assembly (Left)	27	W10181986	Sensor, Oven
2	3196154	Screw				28	3196169	Screw
3		Panel, Side		W10390007	Base Rail Assembly (Right)	29	W10326122	Cover, Terminal Block
	W10162245	Black				30	W10031780	Screw
	W10575396	White	16	W10058460	Foot, Leveling	31	W10268578	Rack, Oven
4	3400029	Nut	17	3196548	Fuse, Thermal	32	W10910404	Counterweight
5	W10129032	Seal, Door	18	3196172	Screw	33	W11034869	Screw
6	W10308476	Element, Broil	19	W10404688	Clip, Oven Support	34	9761301	Screen, Vent
7	W11022836	Element, Bake	20	3186034	Bracket, Service			FOLLOWING PARTS NOT ILLUSTRATED
8	3196174	Screw	21	W10245259	Block, Terminal		8273263	Insulation, Wrap
9	W10134285	Tube, Vent	22	W10281322	Kit, Bare Wire Adapter Block		8272611	Insulation, Back
10	W10674705	Glide, Drawer Front					W10333344	Insulation, Flue
11	W10341186	Front Foot Assembly	23	3196178	Screw			
12	W10067840	Screw	24	W11175594	Light Assembly			
13	8054068	Retainer, Insulation	25	W10571723	Bulb, Halogen 40 Watts			
14	W10137382	Clip, Panel	26	3400016	Screw			

# DOOR PARTS

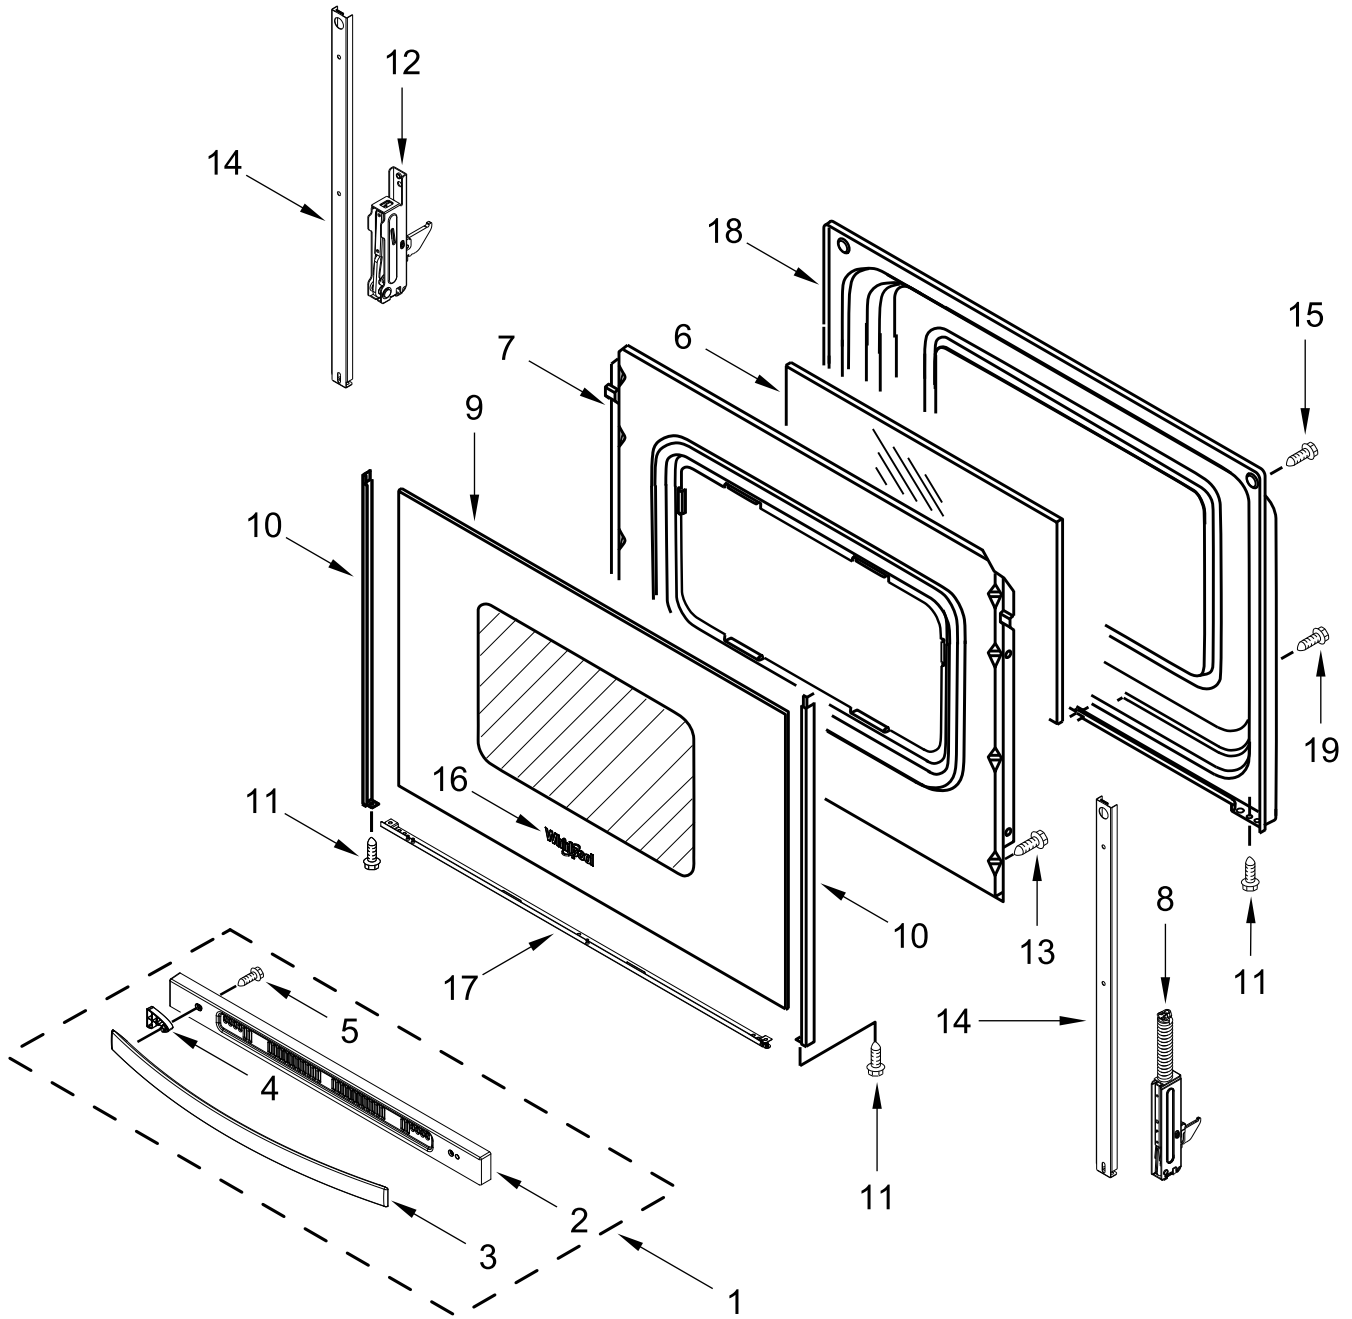




# DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly	7	9761505	Retainer, Insulation	15	W10200660	Screw
	W11039085	Black	8	W10299225	Hinge, Active	16	W10884775	Badge
	W11039084	White	9		Glass Assembly, Outer Door	17		Trim, Lower Door
2		Trim, Vent		W10409946	Black		8523177	Black
	W10310922	Black		W10409945	White		8523175	White
	W10310920	White	10		Trim, Side	18	9761344	Liner, Door
3		Handle, Door		W10746436	Black (Left)	19	W10031790	Screw
	W11022643	Black		W10746435	Black (Right)			
	W11022644	White		8523172	White (Left)			
4		Standoff (Not Serviced, Order Handle and Vent Assembly)		8523166	White (Right)			
			11	W10327235	Screw			
5	W10480830	Screw	12	W10299227	Hinge, Door (Passive)			
6	W11367326	Glass, Inner	13	W10031780	Screw			
			14	W11379944	Strap, Door			

# DRAWER PARTS

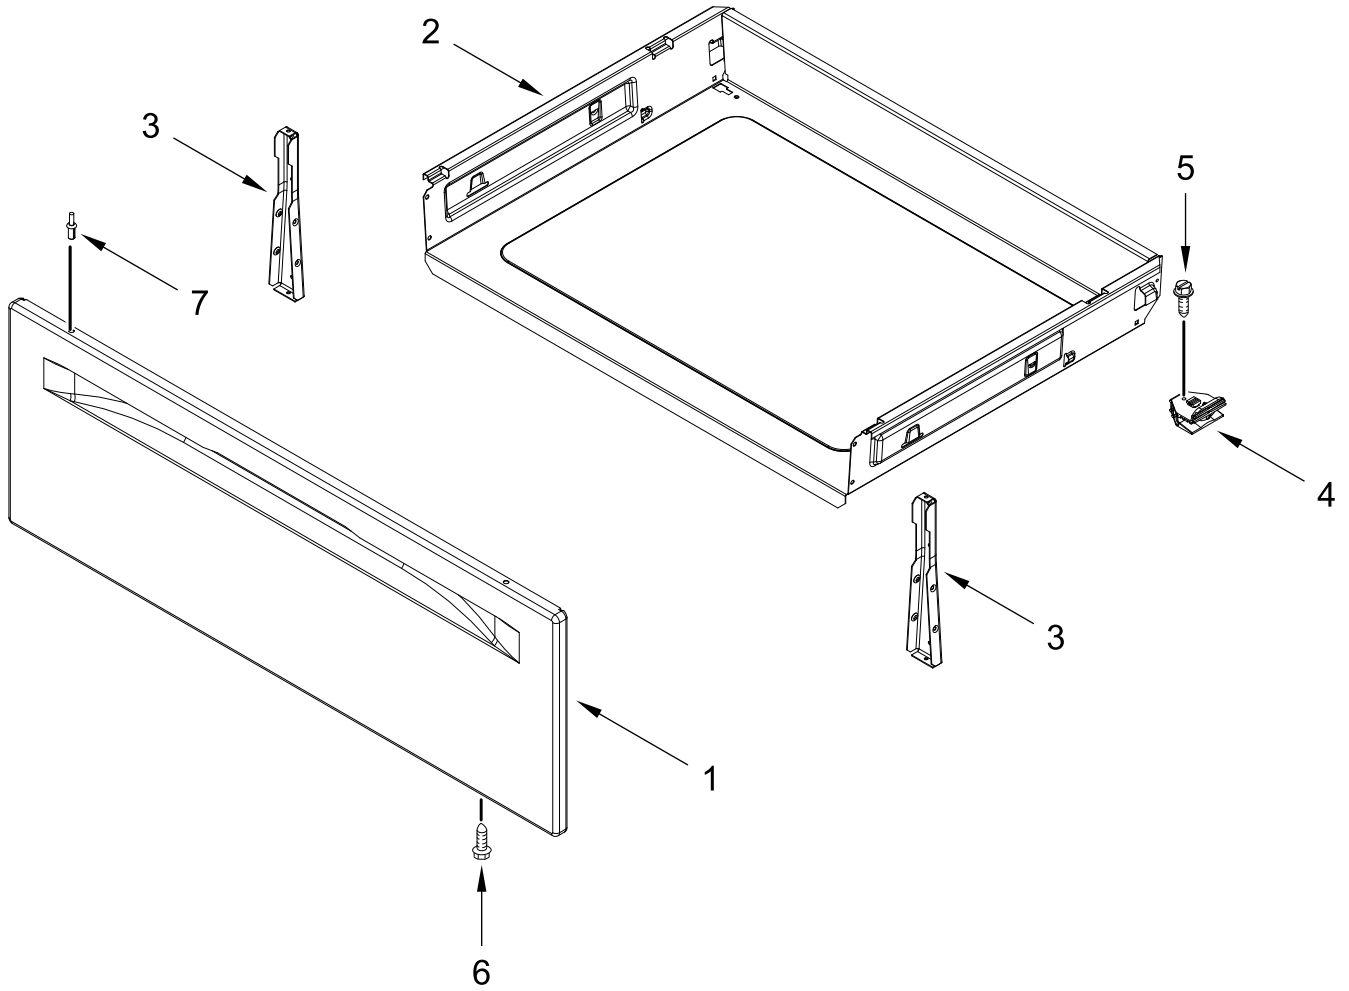

# DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	3	W10462912	Bracket, Mounting Drawer	6	3196169	Screw
	W11123900	Black				7		Rivet, Push
	W11123901	White	4	W10674708	Glide, Drawer Rear		3196813	Black
2	W10688022	Drawer, Storage	5	3196165	Screw		3196814	White

# OPTIONAL PARTS (NOT INCLUDED)

## REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

## PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

## PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

## INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

## PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

## ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Grid, Broiler Pan and
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting