

CLEANING TIPS

| PART TO BE CLEANED | COMPONENT | CLEANING METHODS | WARNING |
|----------------------|----------------------------------|---|--|
| Hob | Stainless steel surface | Use detergents or liquid cream cleaners for ordinary cleaning, or in case the surface has yellowed. If the surface has become brown, use aggressive abrasive paste, when necessary. | Remove food residues immediately after use. Detergents and cleaners must not contain hydrochloric, sulfuric, hydrofluoric acids and their derivatives. |
| | Pan supports | Soak in a solution of warm water and mild soap. Dry after washing. | Not dishwasher safe. |
| | Teppan-yaki griddle plate | Soak in a solution of hot water and mild soap. Dry after washing. | Not dishwasher safe. |
| | Burners: removable parts | Soak the parts in a solution of warm water and mild soap. Dry after washing. | Not dishwasher safe. |
| | Burners: part fixed to the hob | Cleaning products, cream cleaners, or abrasive pastes, including the most aggressive types. | Do not apply any type of cleaner directly to the hob to avoid blockage of gas exit hole. |
| | Electric griddle | Cloth dampened with warm water and neutral soap. | – |
| Control panel | Induction or ceramic glass hob | Use a degreaser first, then a glass cleaner. As an alternative, use a cloth dampened with warm water and soap. | Remove food residues immediately after use. Do not use abrasive materials. |
| | Stainless steel surface | Use detergents or liquid cream cleaners for ordinary cleaning, or in case the surface has yellowed. If the surface has become brown, use delicate abrasive paste. | Remove food residues immediately after use. Detergents and cleaners must not contain hydrochloric, sulfuric, hydrofluoric acids and their derivatives. |
| Oven | Knobs | Soak in a solution of warm water and mild soap. As an alternative, use a damp cloth and soap. | Once the knobs have been removed, do not spill any water or cleaner over into the hole. |
| | Stainless steel external surface | Use detergents or liquid cream cleaners for ordinary cleaning, or in case the surface has yellowed. If the surface has become brown, use delicate abrasive paste. | Remove food residues immediately after use. Detergents and cleaners must not contain hydrochloric, sulfuric, hydrofluoric acids and their derivatives. |
| | Outer glass | Use glass cleaners. | Use neither abrasive sponges nor abrasive products. |
| | Inner glass | Use strong degreasers. | Use neither abrasive sponges nor abrasive products. |
| | Oven cavity | Use a degreaser when the oven is warm. Then clean with warm water and mild soap. Once finished, leave the door open till the oven cavity dries off. | When cleaning, the oven must be switched off. Do not clean the oven before use. |
| | Baking tray | Soak in a solution of warm water and mild soap. Dry after washing. | Remove food residues immediately after use. |
| | Wire shelves | Use a steel cleaner. Rinse with warm water. | – |

