


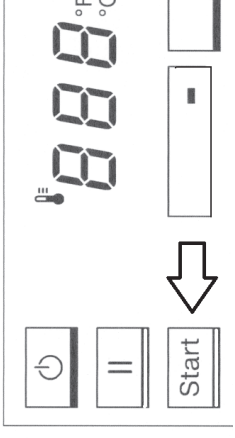
⚠ Please read the instruction manual before installing and using this machine and observe all warning and safety instructions.

1 Preparing for use




- Switch the ironer on by pressing the On /Off  button. The "Finger guard" symbol will flash in the display.
- Now activate the finger guard by lifting it.

2 Ironing



- The button Start begins to flash as soon as the ironer has reached the minimum temperature.
- Now press the flashing Start button to start up the ironer.


3 Select a temperature

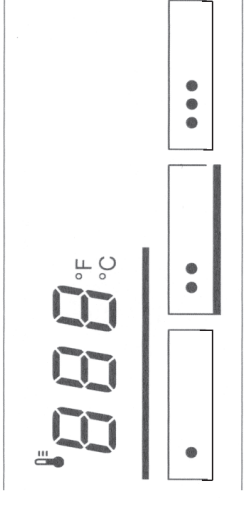

- Set the corresponding heater plate temperature according to the type of fabric.

Type of fabric	Symbol	Temperature
Nylon / artificial silk	●	100 - 110 °C (212 - 230 °F)
Wool, silk	●●	111 - 150 °C (231 - 202 °F)
Cottons / linen	●●●	151 - 185 °C (303 - 365 °F)




4 Selecting the iron speed

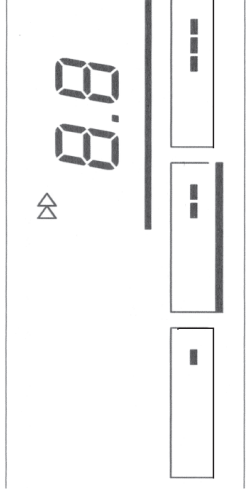

- Select the roller speed.

Symbol	Speed range
-	Low speed range
--	Medium speed range
---	Medium speed range

7 Ironing with a coin-operated payment system

- Switch the ironer on by pressing the "On /Off"  button.
- The  display symbol flashes.
- Insert the coin or token.
- The  symbol will go out in the display.
- Select the corresponding temperature range according to the type of laundry.
- Select the roller speed.

5 Laundry feed

- Lay the item parallel to the roller at the beginning of the laundry infeed table.
- Smooth the item.
- Feed the item into the machine.

After the  indicator light goes out, the rotary iron is ready for ironing and the countdown of the purchased ironing time begins.

- Press the Start button to start the ironer.


6 FlexControl footswitch

- While ironing, press the FlexControl footswitch with your foot to switch the iron to steaming mode and steam the laundry.
Continuing the ironing procedure
- Remove your foot from the footswitch again to continue with the ironing procedure.

At the end of the ironing time, the trough lowers and the roller comes to a standstill. The  display symbol flashes. More ironing time can be purchased at any time.


⚠ Veuillez impérativement lire le mode d'emploi et respecter les prescriptions de sécurité et mises en garde.

1 Préparation la repasseuse pour le fonctionnement

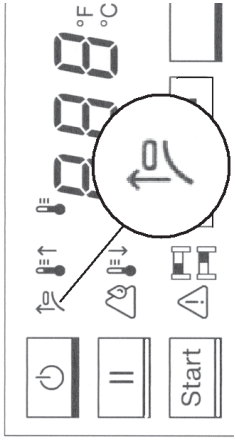


- Appuyer sur la touche pour mettre la repasseuse en marche. Le symbole "barre protégé-doigts" clignote.
- Confirmez la barre protégé-doigts en la soulevant.

2 Repassage

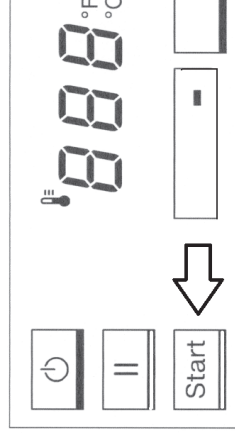

- La touche "Start" commence à clignoter, dès que la température minimale est atteinte.
- Appuyez sur la touche clignotante "Start", pour mettre la repasseuse en service.


3 Sélectionner la température

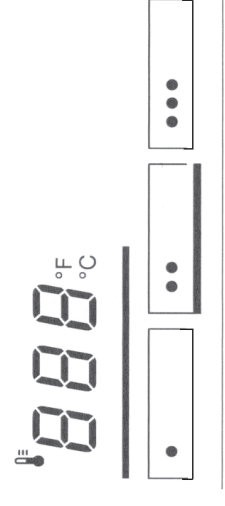

- Réglez la température de presse selon le type de textile du linge.

Type de textile	Symbole	Valeur préréglée
Perlon/soie synthétique	•	100 - 110 °C
Soie / laine	••	111 - 150 °C
Coton / lin	•••	151 - 185 °C

4 Choisir la vitesse de repassage

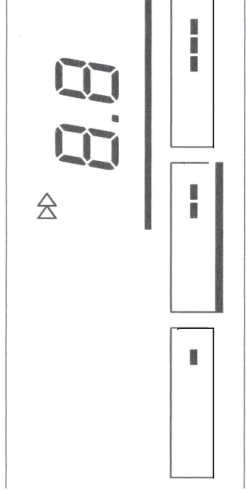

- Réglez la vitesse de rotation du cylindre qui vous convient.

Symbole	Plage de vitesse
-	Plage de vitesse basse
--	Plage de vitesse moyenne
---	Plage de vitesse élevée

7 Utilisation d'un monnayeur

- Mettez en marche la repasseuse à l'aide de la touche .
- Le symbole clignote.
- Introduisez la pièce ou le jeton.
- Le symbole s'éteint.
- Choisissez selon le type de textile, la plage de température correspondante.
- Réglez la vitesse de rotation du cylindre qui vous convient.

5 Introduction du linge

- Placez le textile parallèlement au cylindre au début de la table d'introduction du linge.
- Défroissez le textile.
- Faites passer le textile.

Une fois la diode éteinte, la repasseuse est prête à fonctionner et le temps imparti pour le repassage payé commence.

- Mettez la repasseuse en marche en appuyant sur la touche Start.

6 Barre de commande au pied "FlexControl"

- Pendant le repassage, actionnez à l'aide de votre pied la barre de commande au pied "FlexControl" pour passer la repasseuse en mode défroissage et défroisser le linge. Continuez le repassage
- Retirez le pied de la barre de commande au pied pour continuer le repassage.

Une fois le temps de repassage écoulé, la presses'écarte et le cylindre reste immobilisé. L'affichage clignote. Il est possible d'acheter ultérieurement à tout moment du temps de repassage.