


ITEM #	QTY.	DESCRIPTION
1	1	TOP ASSEMBLY
2	1	(DWR A) TOP DRAWER ASSEMBLY
3	1	(DWR B) BOTTOM DRAWER ASSEMBLY
4	4	BLACK FELT PAD
5	2	RIGHT BRACKET GLIDE
6	2	LEFT BRACKET GLIDE
7	8	8 X 3/4" BRACKET SCREW
8	1	LEG PACK
9	3	KNOB W/BACKPLATE
10	2	SMALL CORBEL
11	1.5	T-MOULDING (LINEAR FT)
12	1	UNIT BACK
13	4	REVERSE THREAD FLANGE INSERT
14	1	FELT DRAWER DROP IN
15	1	PRINTED DRAWER DROP IN

\*\*\*DWR B\*\*\*

USE DRAWER FRONT 140900 BEFORE 10/24/12  
USE DRAWER FRONT 134350 AFTER 10/24/12

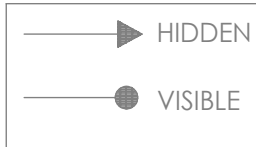

Dwg#: **33691**

Scale: 1:7

Date: 6/8/2010



TOLERANCES ARE:  
METRIC: +.5 / -.5mm  
DECIMAL: 0 / -.005"  
FRACTIONAL: +0 / -.1/32"  
(UNLESS OTHERWISE SPECIFIED)

Work Order: XXXXXXXX

Desc: Nightstand CS

Rev.	Description	Date	Cad/Eng
A	ADDED REVERSE THREAD FLANGE INSERT	3/30/2011	TH/RG
B	ADDED DRAWER DROP IN	7/15/2011	MAP/JF
C	ADDED DRAWER NOTES	10/12/2012	BJB

