









Brockton Shutter Mirror Assembly Instructions

Made in Viet Nam

Components and Hardware List

Allen Head Bolt Ø6 x 40mm  (H1) 8 pcs.	Lock Washer Ø9 x Ø13mm  (H2) 8 pcs.	Flat Washer Ø8 x Ø20mm  (H3) 8 pcs.	Allen Key 4 x 60mm  (H4) 1 pc.
A. DRESSER 1 PC 	B. MIRROR FRAME 1 PC 	C. SUPPORT BAR 2 PCS 	

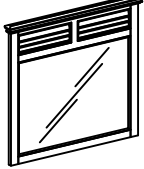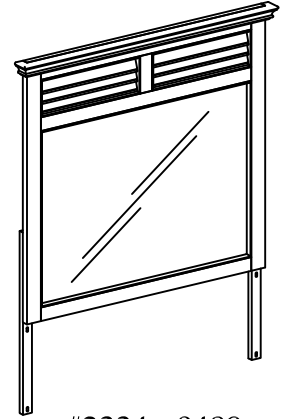

#2334 - 0489

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

Step 1

