

Assembly Instructions for Model #'s

Stainless Steel Carts

UC-3-1827

UC-3-2433

Wire Utility Carts

Rubber Casters

WUC-1836R

WUC-1842R

WUC-2436R

WUC-2442R

Poly Casters

WUC-1836P

WUC-1842P

WUC-2436P

WUC-2442P



Edgewood, New York 11717-8380

© ADVANCE TABCO DECEMBER 2005



**Assembly Instructions for
UTILITY CARTS**



**CHECK FOR CONCEALED DAMAGE
FILE CLAIM WITH FREIGHT CARRIER**

Utility carts manufactured by **ADVANCE TABCO** are designed and constructed for applications including Food Preparation, Cooking, Manufacturing, Material Handling, Laboratory Service and the like. **ADVANCE TABCO** does not recommend product use for activities employing harsh and active chemicals. Consult factory regarding unusual applications.

CONTENTS

- (2) Tubular Handles
- (3) Shelves (Stainless Steel or Wire)
- (4) Casters
- (4) Rubber Bumpers
- (4) Plastic Tapered Split sleeves (Per Shelf)

TOOLS REQUIRED

Rubber Mallet

PLEASE NOTE: The following instructions are showing a Stainless Steel solid shelf being assembled. These instructions apply for assembling a Wire Utility Cart as well.

Step 1:

Position top shelf onto tubular handles.
(Figure 1)

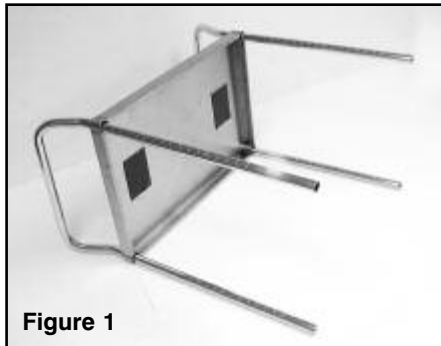


Figure 1

Step 2:

Position Plastic Split Sleeve at desired location (4) required and lower shelf onto split sleeve. (Figure 2)

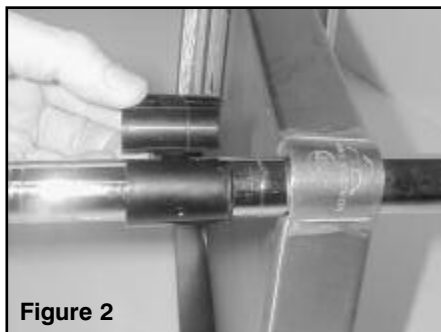


Figure 2

NOTE: Ensure each (4) split sleeves are located at the same height.

Step 3:

Repeat Step 2 for middle and lower shelf.
(Figure 3)

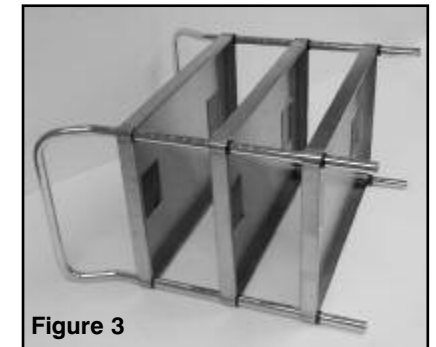


Figure 3

Step 4:

Place rubber bumper onto bottom of tubular handles.
(Figure 4)

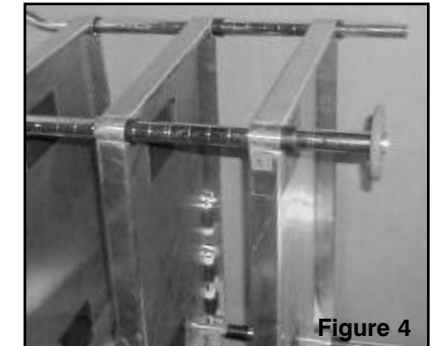


Figure 4

Step 5:

Install caster into the bottom end of each tubular handle (Use rubber mallet if required).

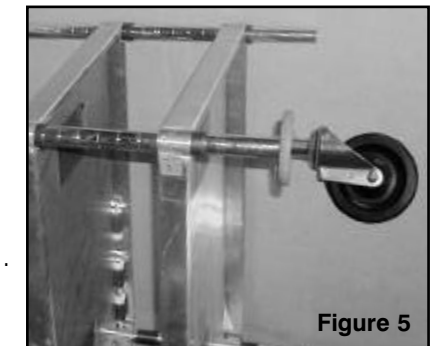


Figure 5